

GENERAL DESCRIPTION

INSTRUMENTATION/DRIVER INFO

1. General Description

A: SPECIFICATIONS

Combination meter	Speedometer	Electric pulse type
	Engine coolant temperature gauge	Thermistor coil type
	Fuel gauge	Resistance coil type
	Tachometer	Electric pulse type
	Turn signal indicator light	14 V — 1.4 W
	Charge indicator light	LED
	Oil pressure indicator light	LED
	ABS warning light	LED
	CHECK ENGINE warning light (Malfunction indicator light)	LED
	HI-beam indicator light	14 V — 1.4 W
	Door open warning light	LED
	Seat belt warning light	LED
	Brake fluid and parking brake warning light	LED
	FWD indicator light	LED
	AIRBAG warning light	LED
	Meter illumination light	14 V — 3 W, 14 V — 2 W
	AT OIL TEMP. warning light	LED
	Security indicator light	LED
	Low fuel warning light	LED
	AT select lever position indicator light	14 V — 100 mA
	LCD back light	14 V — 1.4 W

B: CAUTION

- Be careful not to damage the meters and instrument panel.
- Be careful not to damage the meter glasses.
- Make sure the electrical connector is connected securely.
- After installation, make sure that each meter operates normally.
- Use gloves to avoid damage and getting fingerprints on the glass surface and meter surfaces.
- Do not apply excessive force to the circuit plate.
- Do not drop or otherwise apply impact.

C: PREPARATION TOOL**1. GENERAL TOOLS**

TOOL NAME	REMARKS
Circuit Tester	Used for measuring resistance and voltage.