

## 5. Tachometer

### A: REMOVAL


Disassemble the combination meter, and then remove the speedometer and tachometer assembly.  
<Ref. to IDI-13, DISASSEMBLY, Combination Meter Assembly.>

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

Measure the tachometer resistance.

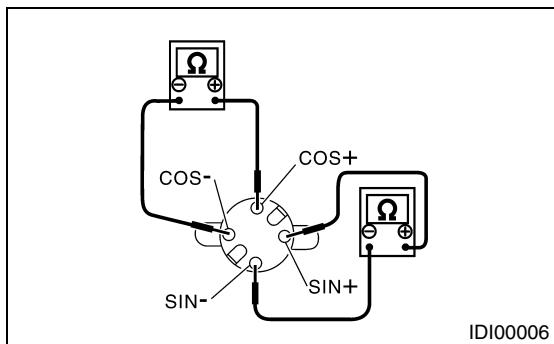

Terminal	Resistance
SIN+ and SIN-	200±8 Ω
COS+ and COS-	200±8 Ω

If NG, replace the speedometer and tachometer assembly.

If OK, replace the combination meter printed circuit.