

7. Water Temperature Gauge

A: REMOVAL


Disassemble the combination meter, and then remove the water temperature gauge and fuel gauge assembly. <Ref. to IDI-13, DISASSEMBLY, Combination Meter Assembly.>

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the water temperature gauge resistance.

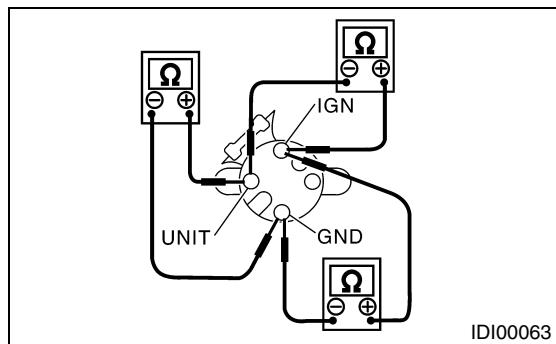

Terminal	Resistance
IGN and GND	$208 \pm 10 \Omega$
IGN and UNIT	$56 \pm 10 \Omega$
UNIT and GND	$264 \pm 10 \Omega$

If NG, replace the water temperature gauge and fuel gauge assembly.

If OK, replace the combination meter printed circuit.