


10. Headlight Bulb

A: REMOVAL


CAUTION:

- Because the tungsten halogen bulb operates at a high temperature, dirt and oil on the bulb surface reduces the bulb's service life. Hold the flange portion when replacing the bulb. Never touch the glass portion.
- Do not leave the headlight without a bulb for a long time. Dust, moisture, etc. entering the headlight may affect its the performance.


- 1) Disconnect the ground terminal from battery.
- 2) Remove the duct (A) (when right side headlight is removed).

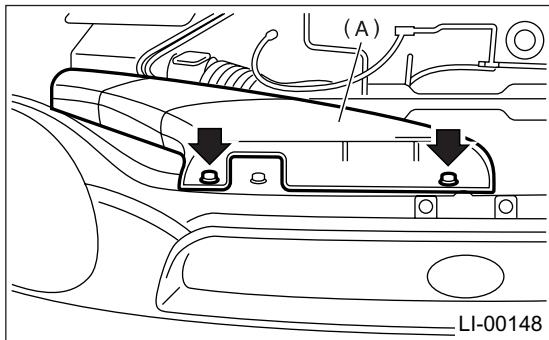

- 3) Disconnect the harness connector.
- 4) Remove the cap (A).

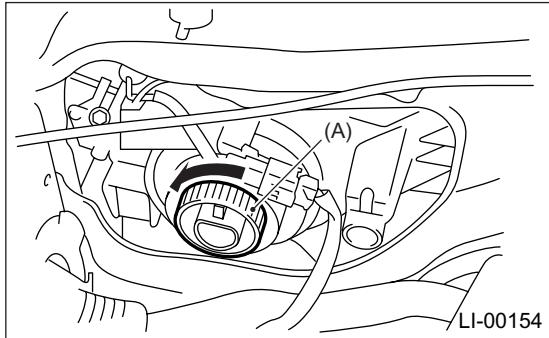

- 5) Remove the headlight bulb (A).

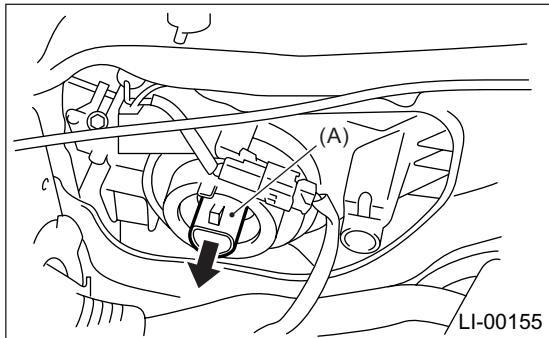

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATIONS, General Description.>
- 3) If NG, replace the bulb with a new one.