


15. Front Side Marker Light Assembly


A: REMOVAL

- 1) Disconnect the ground terminal from battery.
- 2) Pull out the light from body while pushing it up.

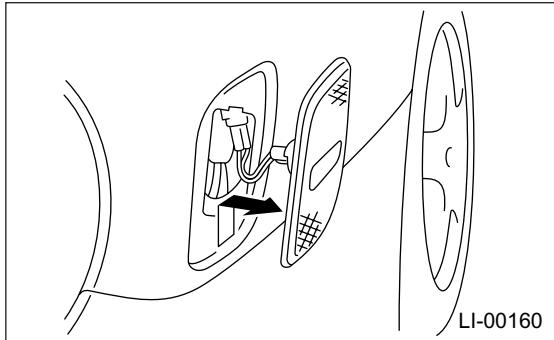

- 3) Disconnect the harness connector and remove the light.

- 4) Turn the socket and remove the bulb.

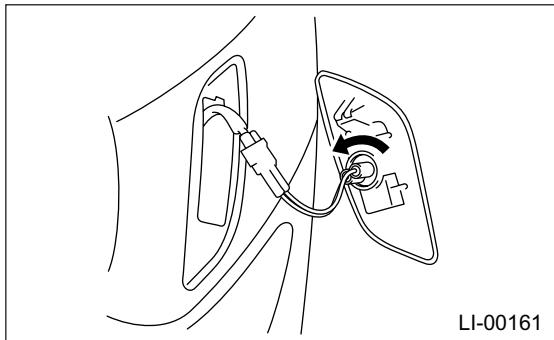

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATIONS, General Description.>
- 3) If NG, replace the bulb with a new one.