

REAR COMBINATION LIGHT ASSEMBLY


LIGHTING SYSTEM

16. Rear Combination Light Assembly

A: REMOVAL


1. SEDAN

- 1) Disconnect the ground terminal from battery.
- 2) Remove the clips and then detach the trunk rear trim.

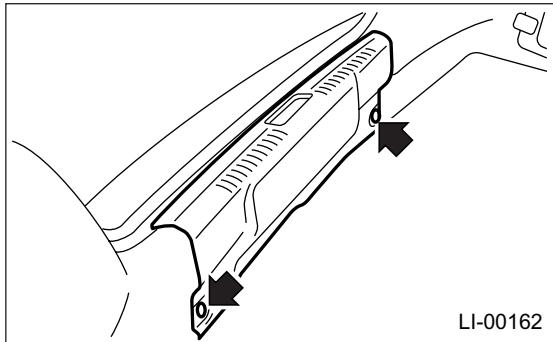

LI-00162


- 3) Remove the trunk side trim of rear portion.
- 4) Remove four nuts and then detach the rear combination light while disconnecting the connector.

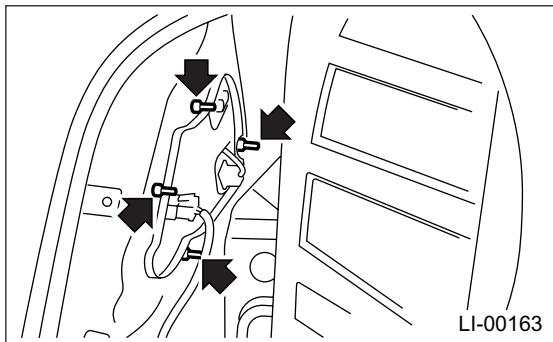

LI-00163


2. WAGON

- 1) Disconnect the ground terminal from battery.
- 2) Remove the clips and then detach the rear combination light covers.

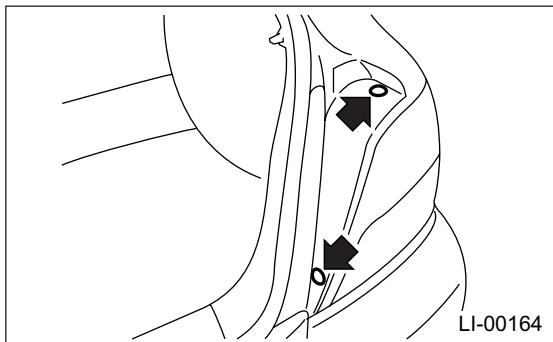


LI-00164

- 3) Remove two bolts.

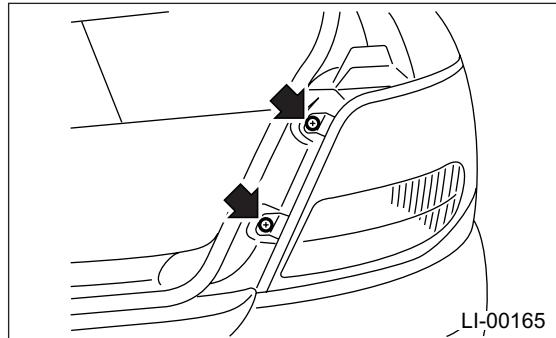

LI-00165

- 4) Remove the rear quarter trim.
<Ref. to EI-48, WAGON, REMOVAL, Rear Quarter Trim.>
- 5) Disconnect the connector and then detach the rear combination light assembly.

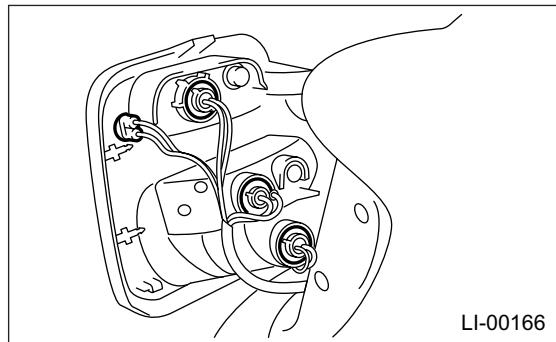

LI-00166

B: INSTALLATION

Install in the reverse order of removal.