


17. Stop/Tail Light Bulb

A: REMOVAL

1. SEDAN


- 1) Remove the trunk side trim of rear portion.
- 2) Turn the socket and remove the bulb.

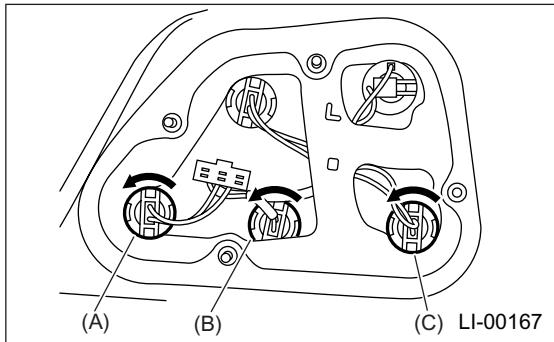

- (A) Stop light
- (B) Tail light
- (C) Tail/stop light

2. WAGON

- 1) Remove the rear combination light assembly.
<Ref. to LI-18, WAGON, REMOVAL, Rear Combination Light Assembly.>
- 2) Turn the socket and remove the bulb.

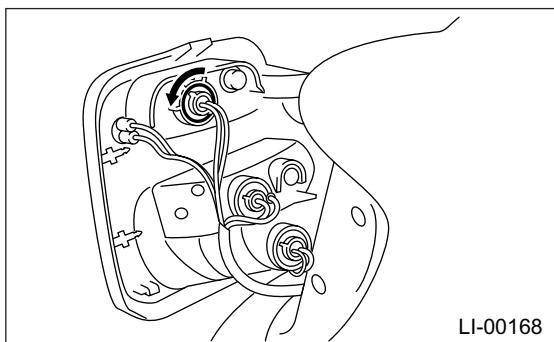

LI-00168

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATIONS, General Description.>
- 3) If NG, replace the bulb with a new one.