


## 26.Trunk Room Light

### A: REMOVAL

- 1) Disconnect the ground terminal from battery.
- 2) Disconnect the harness connectors and remove the trunk room light.

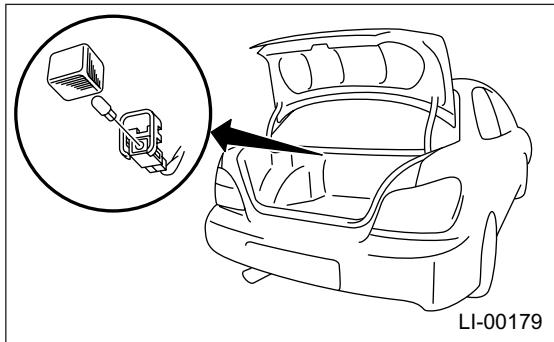

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATIONS, General Description.>
- 3) If NG, replace the bulb with a new one.