


### 27. Glove Box Light

#### A: REMOVAL

- 1) Disconnect the ground terminal from battery.
- 2) Remove the glove box. <Ref. to EI-40, REMOVAL, Glove Box.>
- 3) Disconnect the harness connector.
- 4) Remove the glove box light.

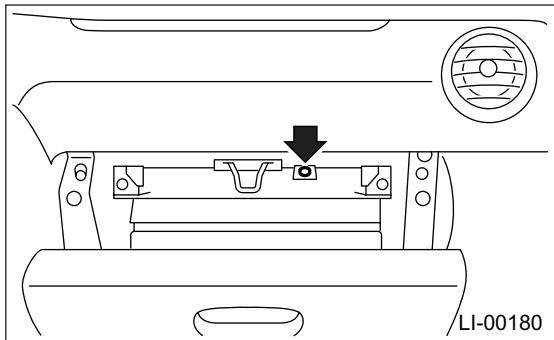

#### B: INSTALLATION

Install in the reverse order of removal.

#### C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATIONS, General Description.>
- 3) If NG, replace the bulb with a new one.

## **GLOVE BOX LIGHT**

**LIGHTING SYSTEM**

---