



## 8. Combination Switch (Light)

### A: REMOVAL

- 1) Remove the instrument panel lower cover. <Ref. to EI-43, REMOVAL, Instrument Panel Assembly.>
- 2) Remove the screws which secure upper column cover to lower column cover.

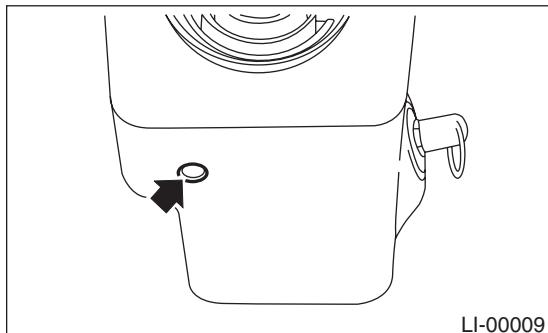

- 3) Disconnect the connector from combination switch.
- 4) Remove the screws which secure switch and remove the switch.

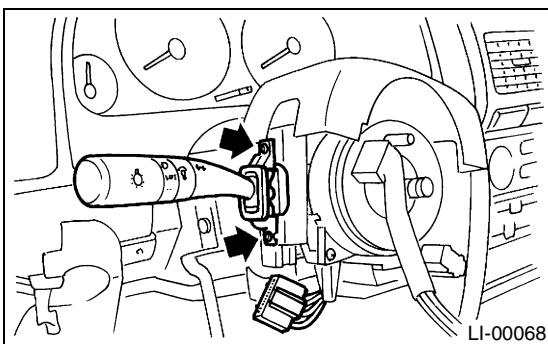


### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

Measure the combination switch resistance.

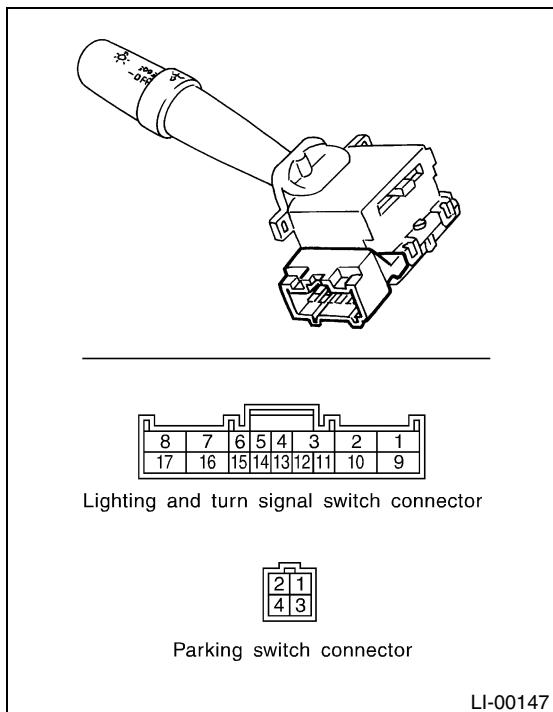

#### 1. LIGHTING SWITCH

Switch position	Terminal No.	Standard
OFF	—	More than 1MΩ
Tail	14 and 16	Less than 1Ω
Head	13, 14 and 16	Less than 1Ω

#### 2. DIMMER AND PASSING SWITCH

Switch position	Terminal No.	Standard
Passing	7, 8 and 16	Less than 1Ω
Low beam	16 and 17	Less than 1Ω
High beam	7 and 16	Less than 1Ω

#### 3. TURN SIGNAL SWITCH

Switch position	Terminal No.	Standard
Left	1 and 2	Less than 1Ω
Neutral	—	More than 1MΩ
Right	2 and 3	Less than 1Ω

#### 4. PARKING SWITCH

Switch position	Terminal No.	Standard
OFF	2 and 4	Less than 1Ω
ON	1 and 4	Less than 1Ω