


## 2. Rear Spoiler


### A: REMOVAL

- 1) Disconnect the ground terminal from battery.
- 2) Open the trunk lid.
- 3) Disconnect the connector of high mounted stop-light.

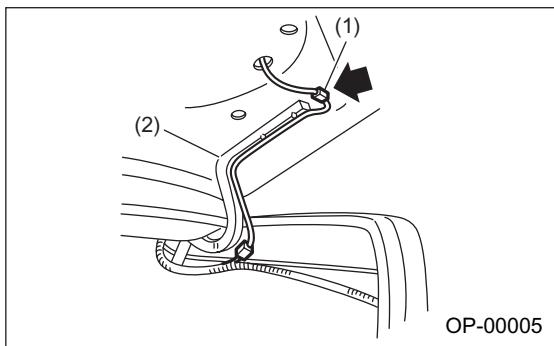

(1) Connector  
(2) Trunk hinge

- 4) Remove the retention cable with the trunk hinge lower side bolt.
- 5) Remove the mounting nuts of rear spoiler.

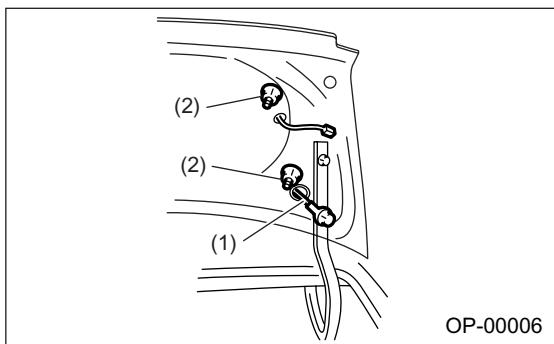

(1) Retention cable  
(2) Mounting nut

- 6) Remove the rear spoiler with retention cable.

#### CAUTION:

Pay attention to avoid damage during removal or installation.

### B: INSTALLATION

Install in the reverse order of removal.

#### Tightening torque:

*Rear spoiler to trunk lid*

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

*Retention cable to trunk hinge*

13.7 N·m (1.4 kgf-m, 10.1 ft-lb)