


REAR DIFFERENTIAL PROTECTOR

OPTION PARTS

5. Rear Differential Protector


A: REMOVAL

- 1) Remove the rear exhaust pipe and muffer.
- 2) Remove the differential front member installation bolts.

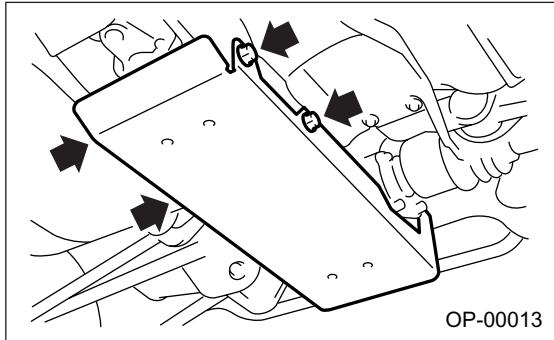

OP-00013

- 3) Loosen the nuts until the rear differential protector can be removed.

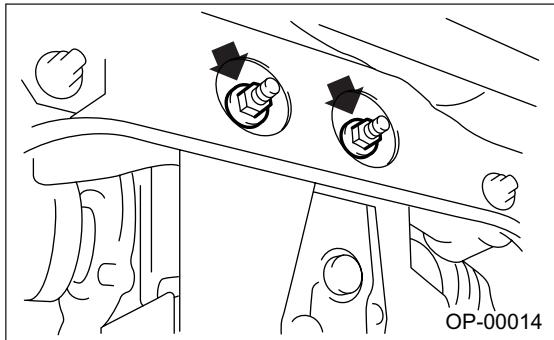

OP-00014


- 4) Remove the rear differential protector.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

70 N·m (7.1 kgf-m, 51.6 ft-lb)

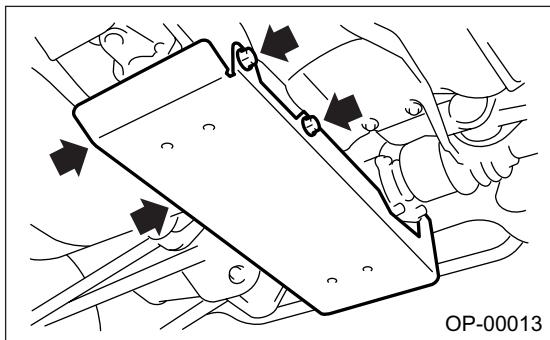


OP-00013

NOTE:

Install the protector between the nuts and differential rear member.

Tightening torque:

70 N·m (7.1 kgf-m, 51.6 ft-lb)

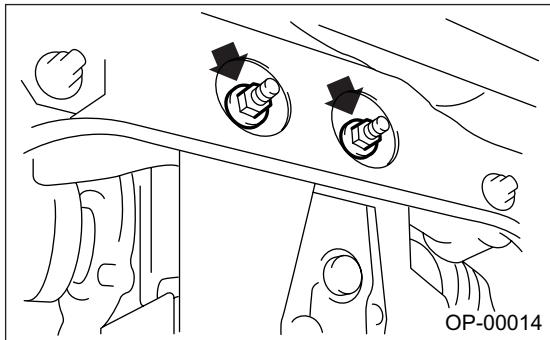

OP-00014