


### 5. Rear Seat Belt


#### A: REMOVAL

##### 1. OUTER BELT SIDE (SEDAN)


- 1) Remove the rear seat. <Ref. to SE-11, REMOVAL, Rear Seat.>
- 2) Remove the side sill rear lower cover. <Ref. to EI-47, REMOVAL, Lower Inner Trim.>
- 3) Remove the seat belt lower anchor bolt.

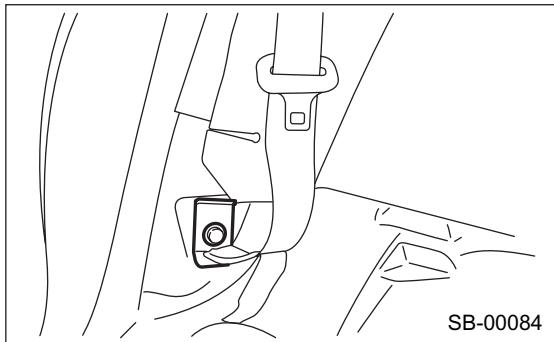


- 4) Remove the anchor cover. Remove the bolt and shoulder anchor from pillar.

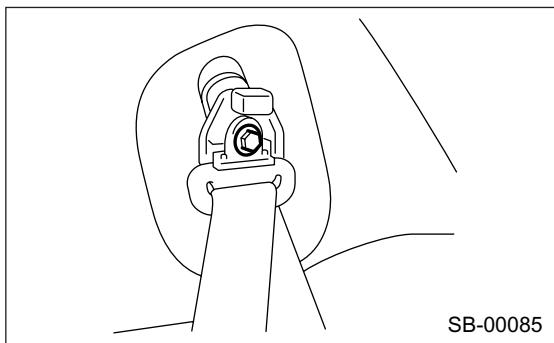

- 5) Remove the quarter pillar trim. <Ref. to EI-48, REMOVAL, Rear Quarter Trim.>
- 6) Remove the bolts, and then detach the seat belt.

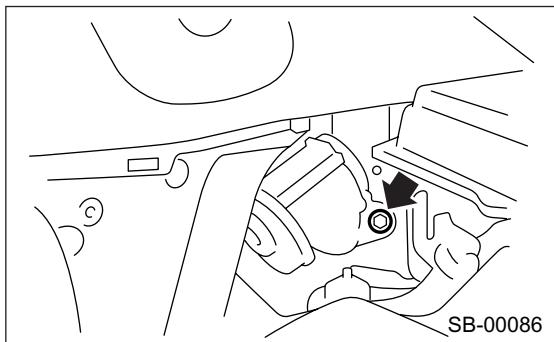


- 7) Remove the two bolts and adjustable anchor AS-SY.

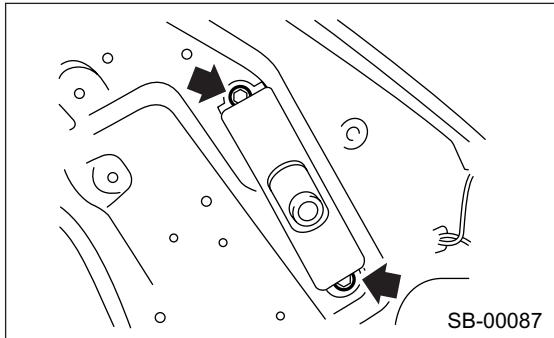


##### 2. OUTER BELT CENTER (SEDAN)

- 1) Remove the rear seat. <Ref. to SE-11, REMOVAL, Rear Seat.>
- 2) Remove the seat belt lower anchor bolt.

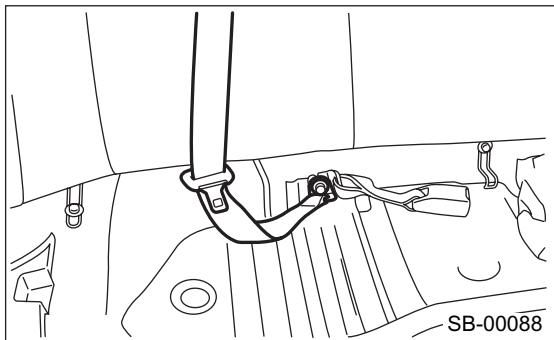


- 3) Remove the quarter pillar trim. <Ref. to EI-48, Removal, Rear Quarter Trim.>
- 4) Remove the rear shelf trim. <Ref. to EI-54, REMOVAL, Rear Shelf Trim.>
- 5) Remove the bolts, and then detach the seat belt.

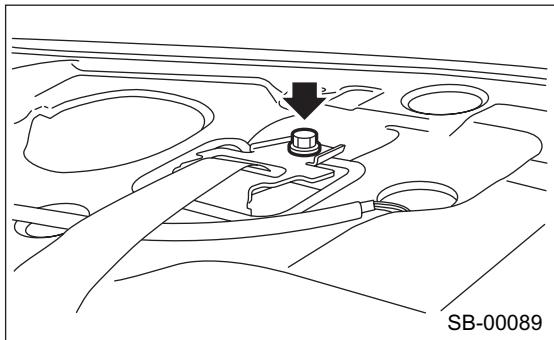


**3. INNER BELT (SEDAN)**


- 1) Remove the rear cushion. <Ref. to SE-11, REMOVAL, Rear Seat.>
- 2) Remove the bolts, and then detach the inner belt.

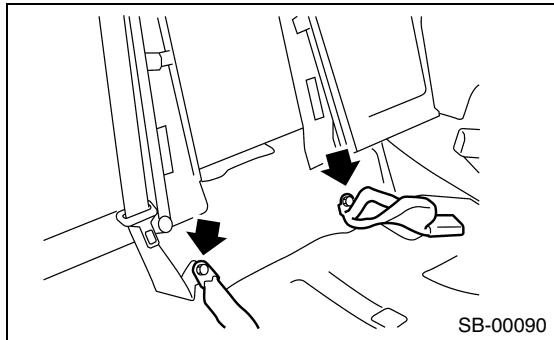**4. OUTER BELT SIDE (WAGON)**

- 1) Remove the luggage floor mat. <Ref. to EI-57, REMOVAL, Luggage Floor Mat.>
- 2) Remove the rear seat. <Ref. to SE-11, REMOVAL, Rear Seat.>
- 3) Remove the side sill rear lower cover. <Ref. to EI-47, REMOVAL, Lower Inner Trim.>
- 4) Remove the seat belt lower anchor bolt.

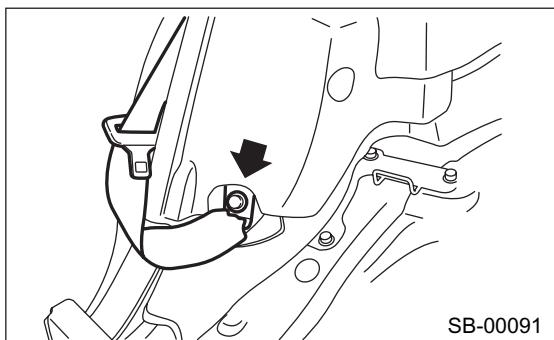


- 5) Remove the anchor cover. Remove the bolt and shoulder anchor from pillar.

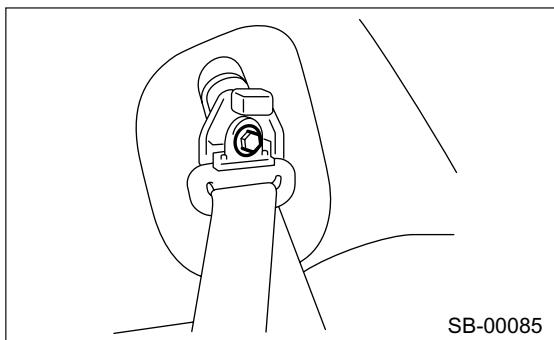


- 6) Remove the rear quarter trim. <Ref. to EI-48, REMOVAL, Rear Quarter Trim.>

- 7) Remove the bolts, and then detach the outer belt side.

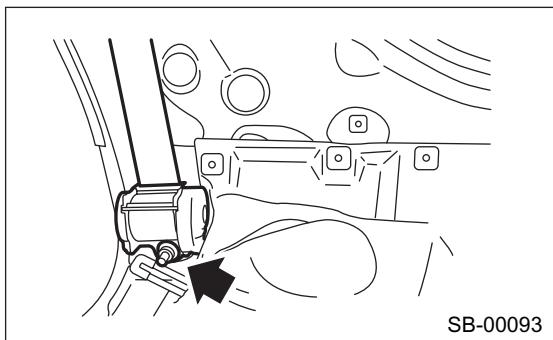

- 8) Remove the two bolts and adjustable anchor AS-SY.

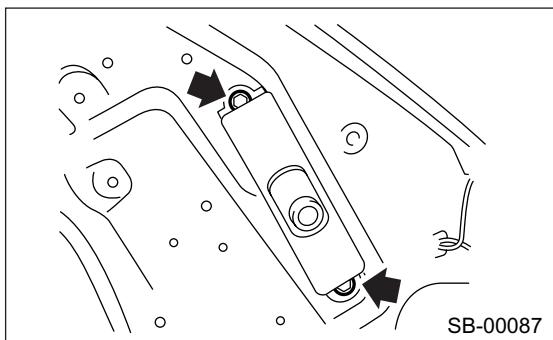


## REAR SEAT BELT

### SEAT BELT SYSTEM


#### 5. OUTER BELT CENTER (WAGON)

- 1) Loosen the shoulder anchor bolt, and then detach the shoulder anchor from quarter pillar.

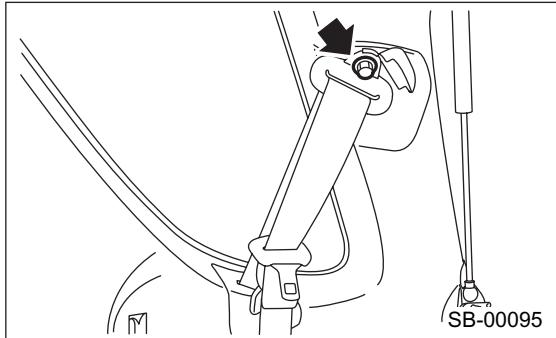


#### 6. INNER BELT (WAGON)

- 1) Remove the rear cushion.
- 2) Remove the bolt, and then detach the inner belt.

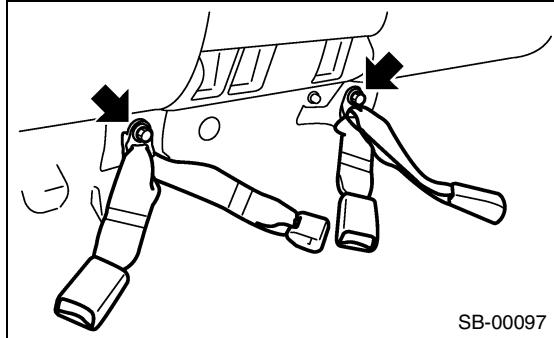

- 2) Remove the quarter trim. <Ref. to EI-48, REMOVAL, Rear Quarter Trim.>

- 3) Remove the three bolts, and then detach the outer belt center.

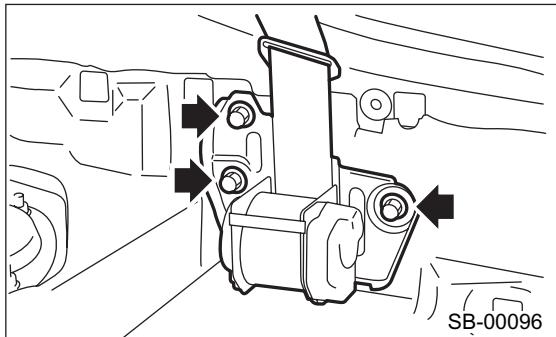

**B: INSTALLATION****1. OUTER BELT SIDE (SEDAN)**

Install in the reverse order of removal.

**CAUTION:**

- During installation, make sure that the seat belts are not twisted.
- After installation, make sure that the seat belts can be smoothly extended and wound.

**2. OUTER BELT CENTER (SEDAN)**

Install in the reverse order of removal.

**CAUTION:**

- During installation, make sure that the seat belts are not twisted.
- After installation, make sure that the seat belts can be smoothly extended and wound.

**3. INNER BELT (SEDAN)**

Install in the reverse order of removal.

**CAUTION:**

During installation, make sure that the seat belts are not twisted.

**4. OUTER BELT SIDE (WAGON)**

Install in the reverse order of removal.

**CAUTION:**

- During installation, make sure that the seat belts are not twisted.
- After installation, make sure that the seat belts can be smoothly extended and wound.

**5. OUTER BELT CENTER (WAGON)**

Install in the reverse order of removal.

**CAUTION:**

- During installation, make sure that the seat belts are not twisted.
- After installation, make sure that the seat belts are smoothly extended and wound.

**6. INNER BELT (WAGON)**

Install in the reverse order of removal.

**CAUTION:**

During installation, make sure that the seat belts are not twisted.

**C: INSPECTION****1. OUTER BELT SIDE (SEDAN)**

Check for the following, and replace with new parts if necessary.

- Seat belt is slackened, bent, or frayed. Seat belt is abnormally wound or extended.

**2. OUTER BELT CENTER (SEDAN)**

Check for the following, and replace with new parts if necessary.

- Seat belt is slackened, bent, or frayed. Seat belt is abnormally wound or extended.

**3. INNER BELT (SEDAN)**

Check for the following, and replace with new parts if necessary.

- Inner belt is deformed or damaged.
- Seat belt buckle is engaged improperly.

**4. OUTER BELT SIDE (WAGON)**

Check for the following, and replace with new parts if necessary.

- Seat belt is slackened, bent, or frayed. Seat belt is abnormally wound or extended.

**5. OUTER BELT CENTER (WAGON)**

Check for the following, and replace with new parts if necessary.

- Seat belt is slackened, bent, or frayed. Seat belt is abnormally wound or extended.

**6. INNER BELT (WAGON)**

Check for the following, and replace with new parts if necessary.

- Inner belt is deformed or damaged.
- Seat belt buckle is engaged improperly.

## **REAR SEAT BELT**

**SEAT BELT SYSTEM**

---