


GENERAL DESCRIPTION

SEATS

1. General Description

A: COMPONENT

1. FRONT SEAT

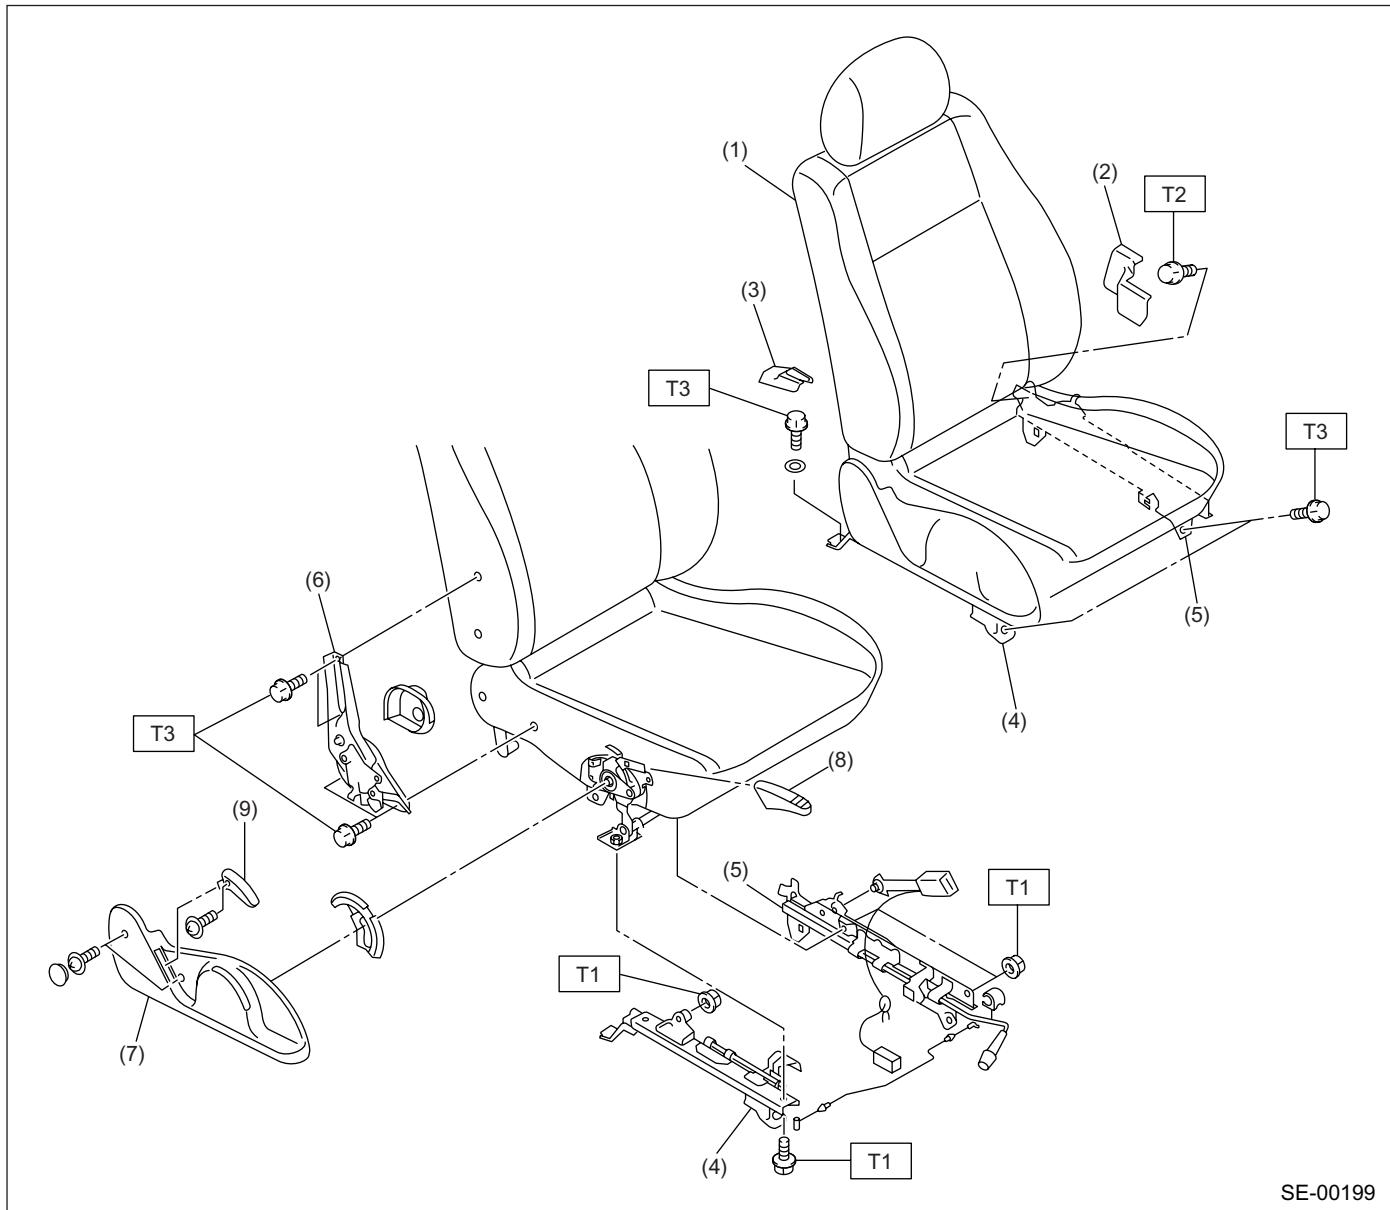

- (1) Front seat ASSY
- (2) Rail cover IN
- (3) Rail cover OUT
- (4) Slide rail OUT
- (5) Slide rail IN

- (6) Seat hinge
- (7) Seat hinge cover
- (8) Seat lifter lever
- (9) Reclining lever


Tightening torque: N·m (kgf·m, ft·lb)

T1: 24.5 (2.5, 18)
T2: 30 (3.1, 22)
T3: 53 (5.4, 39)

GENERAL DESCRIPTION

SEATS

2. REAR SEAT (SEDAN)

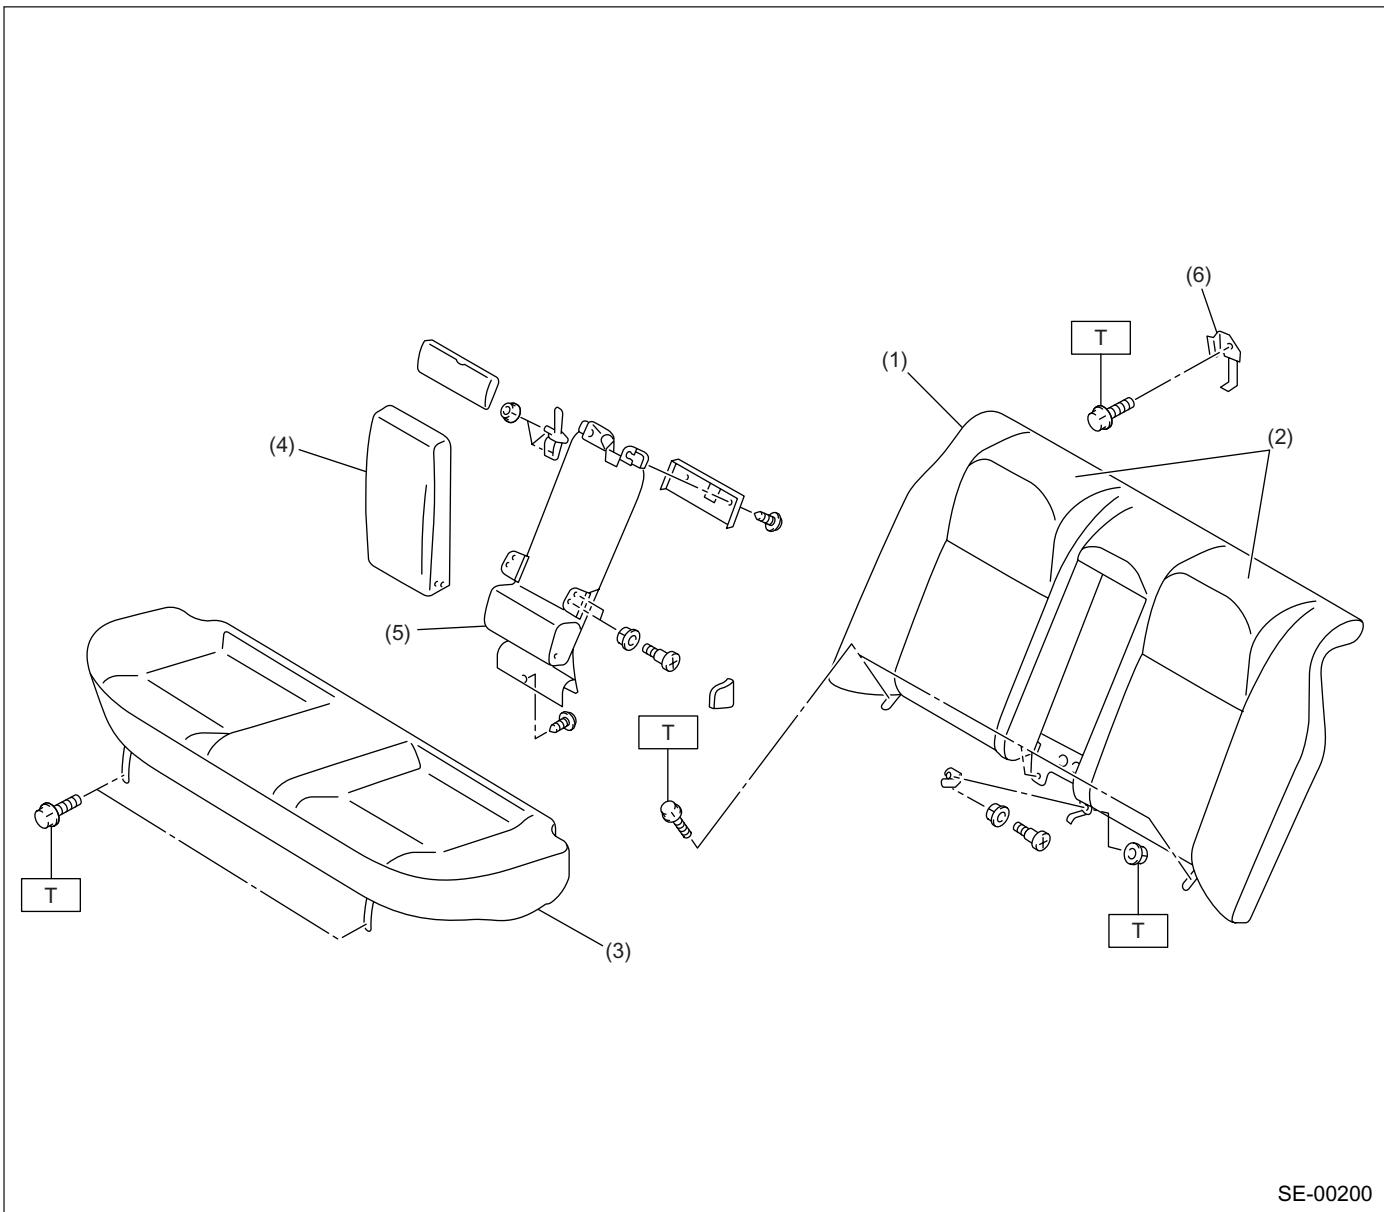

SE-00200

- (1) Backrest
- (2) Head restraint
- (3) Cushion


- (4) Arm rest
- (5) Center through frame
- (6) Hook

Tightening torque: N·m (kgf·m, ft-lb)
T: 24.5 (2.5, 18.1)

GENERAL DESCRIPTION

SEATS

3. REAR SEAT (WAGON)

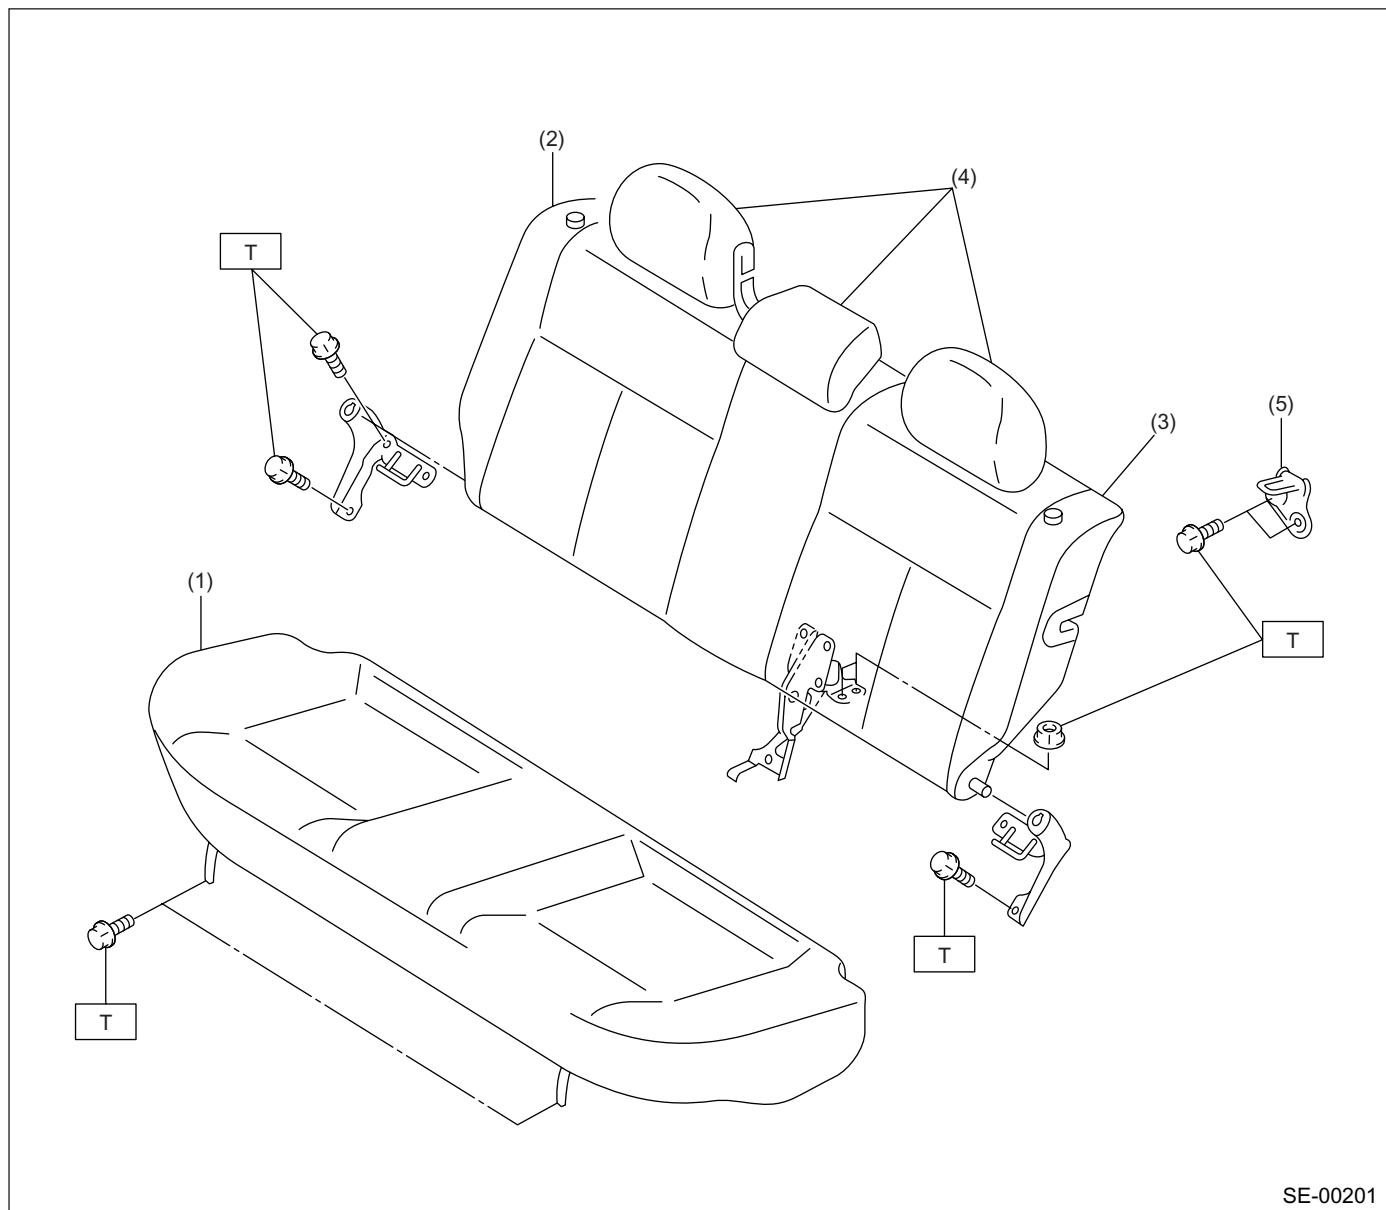

SE-00201

- (1) Cushion
- (2) Backrest RH
- (3) Backrest LH

- (4) Head restraint
- (5) Striker

Tightening torque: N·m (kgf·m, ft-lb)
T: 24.5 (2.5, 18.1)

GENERAL DESCRIPTION

SEATS

B: CAUTION

- Take care not to contaminate or damage seat surface.

- While loading to or unloading to the vehicle, take care not to contact body.
- When removing the front seat from a side airbag loaded vehicle, follow cautions given in the airbag section.

C: PREPARATION TOOL

1. GENERAL TOOL

TOOL NAME	REMARKS
Long Nose Pliers	Used for removing and installing the hog ring