



2. Front Seat

A: REMOVAL


- 1) Disconnect the ground terminal from battery.
- 2) While pressing the headrest lock button, remove the headrest.

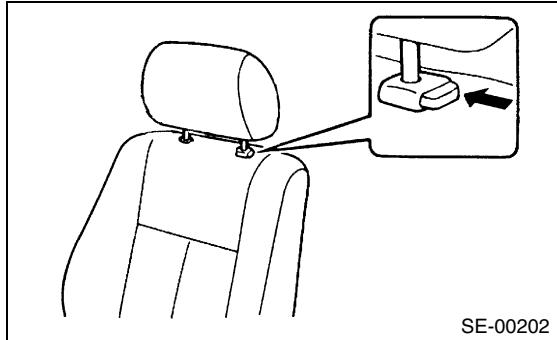

- 3) Tilt forward the backrest.
- 4) Move the seat to full front end.
- 5) Remove the bolt cover at rear end of slide rail.

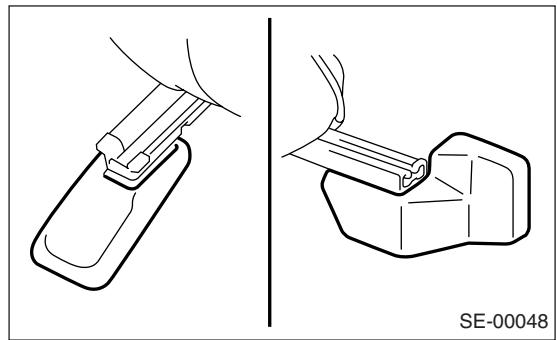


- 6) Remove the two bolts at rear side of seat rail.

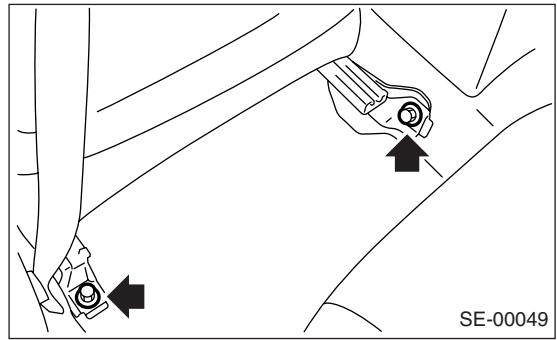


- 7) Move the seat to full rear end.

- 8) Remove the two bolts at front side of seat rail.

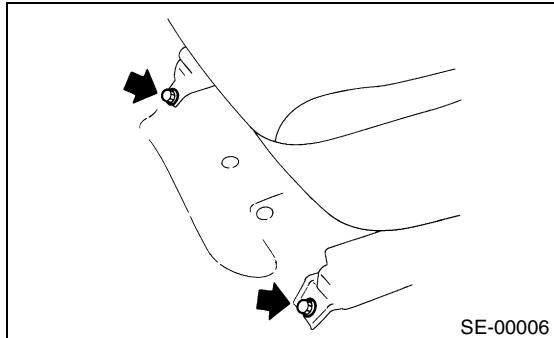

- 9) Disconnect the side airbag connector under the seat. (Side airbag equipped vehicle)
- 10) Disconnect the connector of seat belt warning.

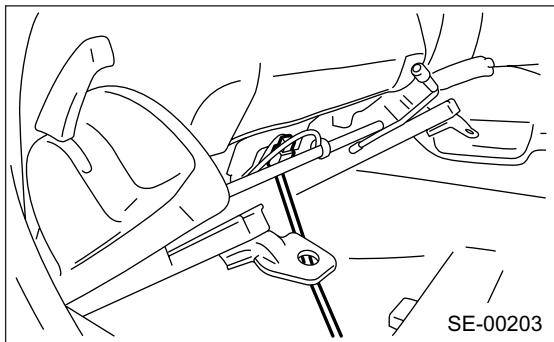

- 11) Remove the front seat from vehicle.

CAUTION:

When removing the seat from vehicle, take care not to damage body, seat or trim.

B: INSTALLATION


Install in the reverse order of removal.

CAUTION:


Confirm that the seat can move smoothly and be locked securely at any position.

C: DISASSEMBLY**1. DRIVER'S SEAT**


- 1) Remove the seat from the vehicle. <Ref. to SE-6, REMOVAL, Front Seat.>
- 2) Remove the reclining hinge cover.

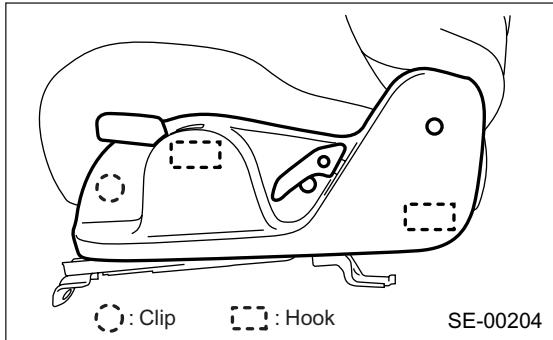


- 3) Remove the hook at bottom of seat backrest.

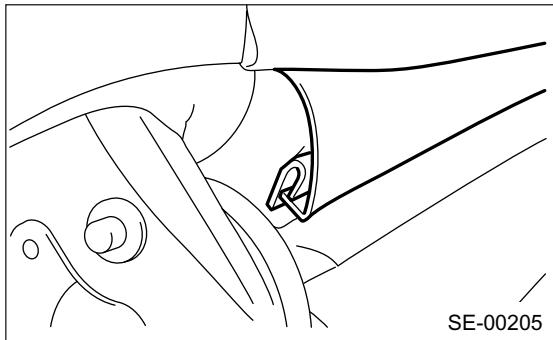


- 4) Remove the hinge cover and screw.

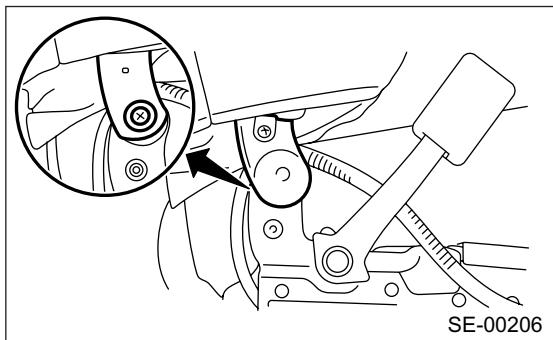


- 5) Remove the two bolts.

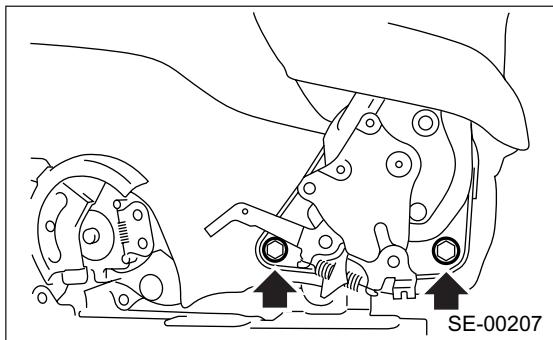

- 6) Turn the cover, and remove the two bolts from hinge.

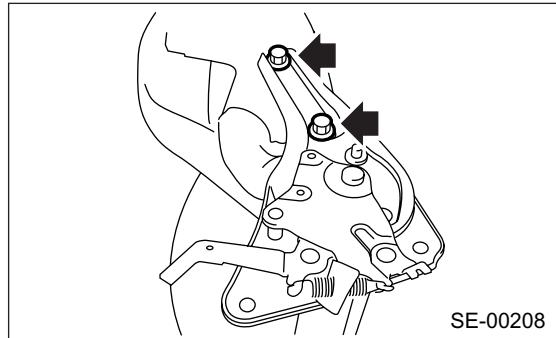


- 7) Loosen the bolt and nuts to remove slide rail.

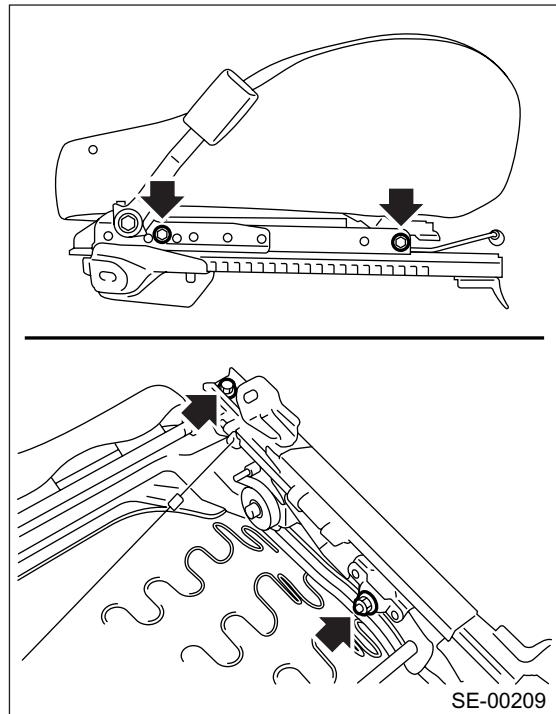

- 8) Remove the hog rings, and then remove seat back rest cover.


Without side airbag model:

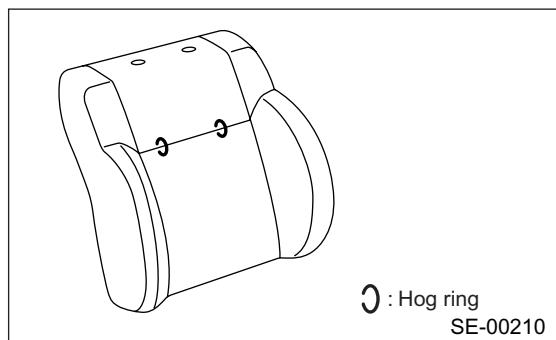

FRONT SEAT


SEATS

With side airbag model:

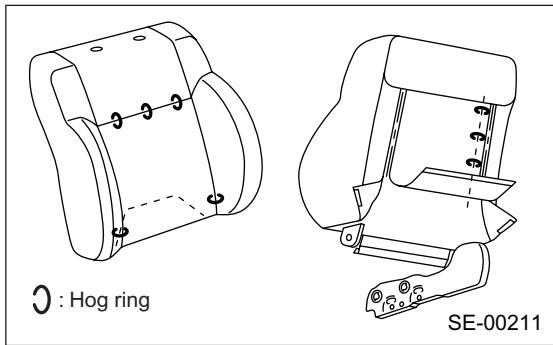


9) Remove the hog rings, and then remove the seat cushion cover.


Standard type model:

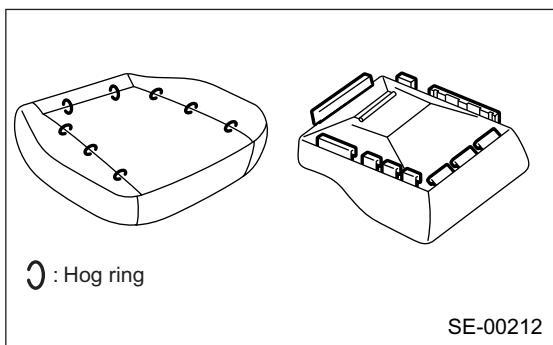


Sporty type model:

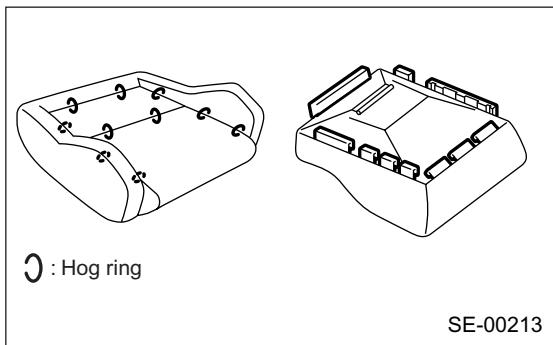


3) Turn the cover, and remove the two bolts from hinge.

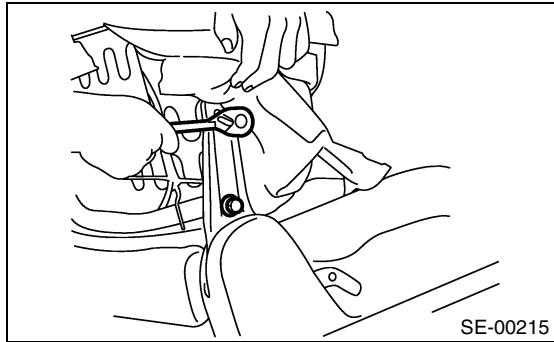

4) Remove the hinge screw cover and screw, and remove seat back rest from hinge.

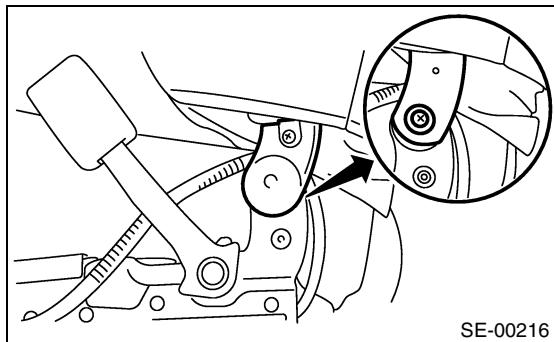


5) Remove the reclining lever cover and hinge cover.

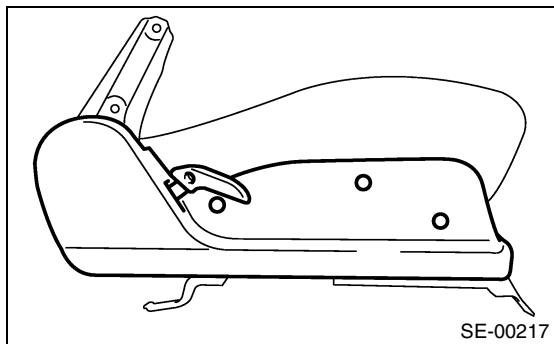


2. PASSENGER'S SEAT


- 1) Remove the seat from the vehicle. <Ref. to SE-6, REMOVAL, Front Seat.>
- 2) Remove the hook at bottom of seat back rest.

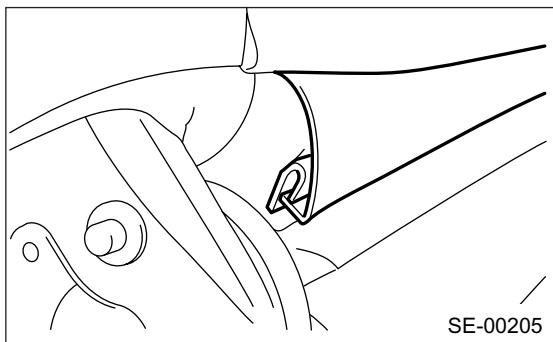


6) Loosen four bolts to remove the seat cushion.

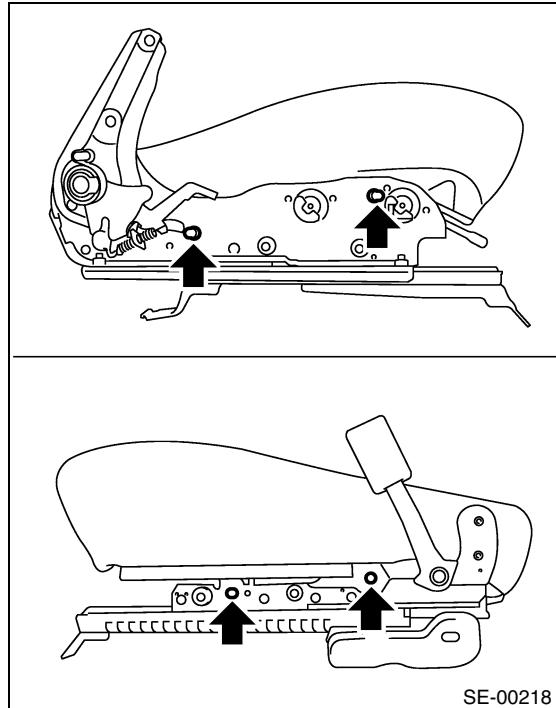

7) Loosen four screws to remove the hinge.

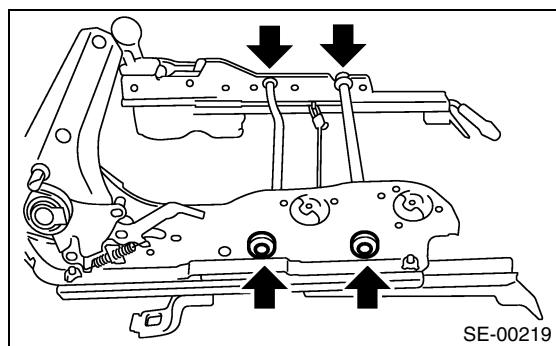


8) Loosen two bolts to remove the slide rail.

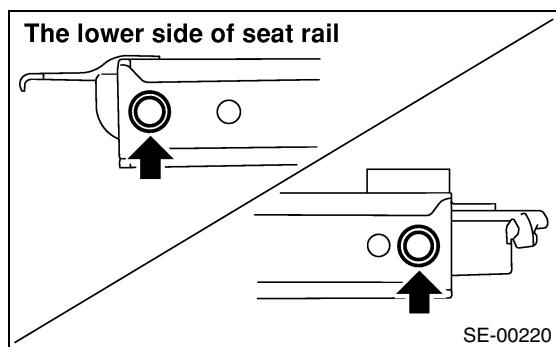


9) Remove the hog rings, and then remove the seat back rest cover.

Without side airbag model:

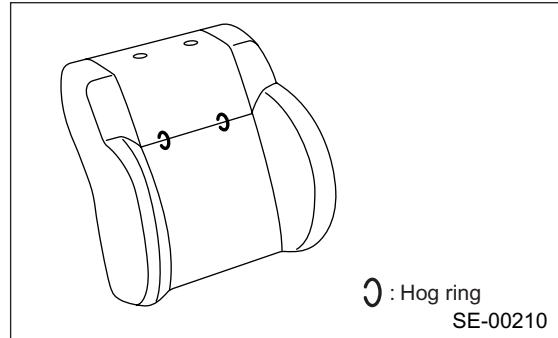


With side airbag model:

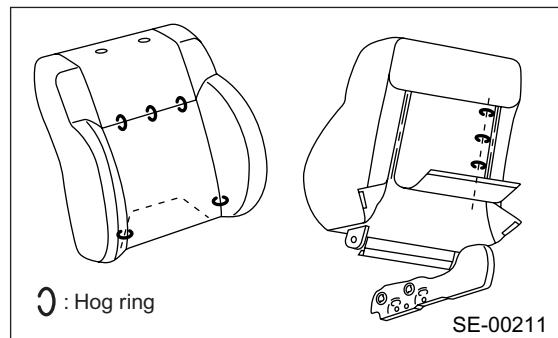


10) Remove the hog rings, and then remove the seat cushion cover.

Standard type model:

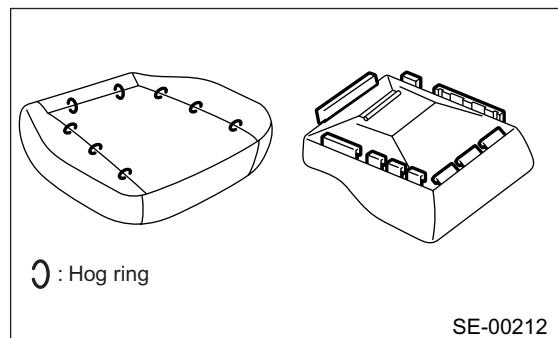

Sporty type model:

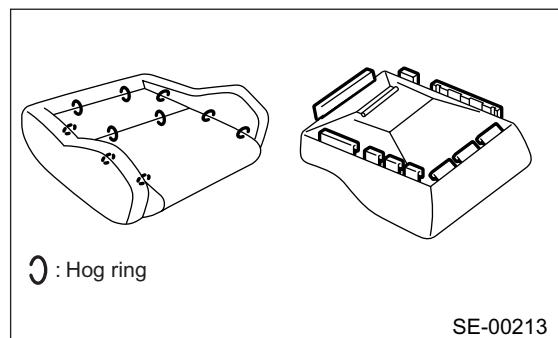

D: ASSEMBLY

1. DRIVER'S SEAT

Assemble in the reverse order of disassembly.

NOTE:

- Do not contaminate or damage the cover.
- While installing the hog rings, prevent the seat from getting wrinkled.

2. PASSENGER'S SEAT

Assemble in the reverse order of disassembly.

NOTE:

- Do not contaminate or damage the cover.
- While installing the hog rings, prevent the seat from getting wrinkled.