


10. Rear Outer Handle

A: REMOVAL

- 1) Remove the rear door trim. <Ref. to EI-39, REMOVAL, Rear Door Trim.>
- 2) Remove the sealing cover. <Ref. to EB-17, REMOVAL, Rear Sealing Cover.>
- 3) Remove the rear inner remote. <Ref. to SL-36, REMOVAL, Rear Inner Remote.>
- 4) Disconnect rod lock knob and bell crank.
- 5) Remove the rear door latch assembly. <Ref. to SL-38, REMOVAL, Rear Door Latch Assembly.>
- 6) Loosen two bolts and nut to remove the rear outer handle.

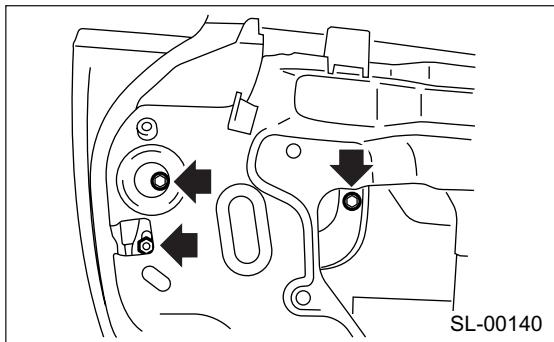

CAUTION:

Do not use excessive force to remove the door panel. This will deform it.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Make sure the rod is not deformed.
- 2) Make sure the lever and rod work smoothly.