


12. Rear Door Lock Actuator

A: REMOVAL

- 1) Remove the rear door latch assembly. <Ref. to SL-38, REMOVAL, Rear Door Latch Assembly.>
- 2) Loosen two screws to remove the rear door lock actuator.

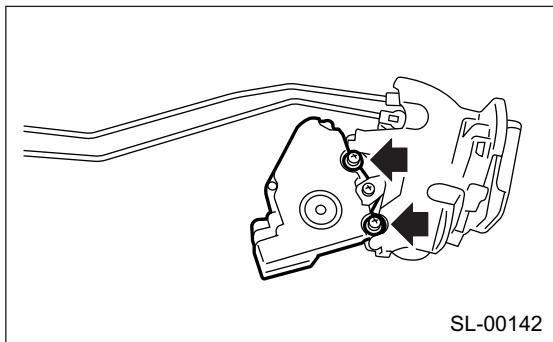

B: INSTALLATION


Install in the reverse order of removal.

CAUTION:

Make sure the lock works properly after installation.

C: INSPECTION

- 1) Disconnect the door lock actuator harness connector.
- 2) Connect the battery to the door lock actuator terminals.

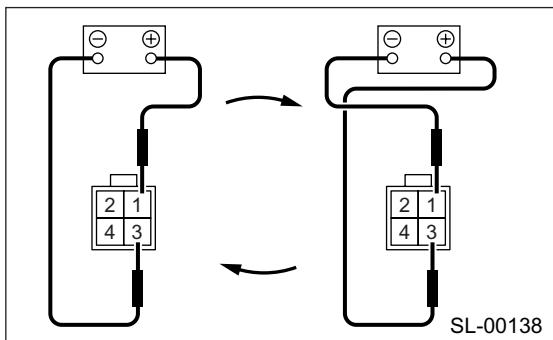

Terminal No.	Actuator operation
No. 3 (+) and No. 1 (-)	Unlocked → Locked
No. 1 (+) and No. 3 (-)	Locked → Unlocked

If NG, replace the door lock actuator.