


21.Key Lock Cylinders

A: REPLACEMENT


1. FRONT DOOR

- 1) Remove the door trim. <Ref. to EI-38, REMOVAL, Front Door Trim.>
- 2) Pull back the sealing cover.
- 3) Move the front door glass downward.
- 4) Remove the rod clamp. Remove the bolt. Replace the key cylinder.

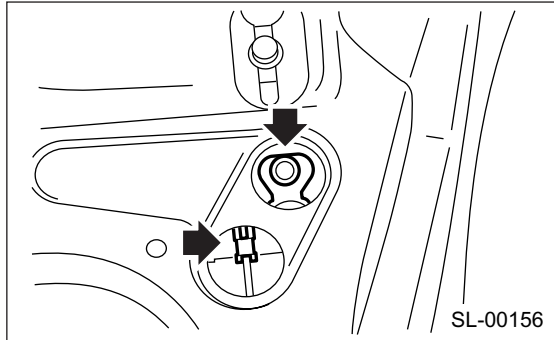

2. TRUNK LID

- 1) Remove the trunk lid release handle. <Ref. to SL-44, Trunk Lid Release Handle.>
- 2) Remove the rod clamp. Remove the lock plate. Replace the key cylinder.

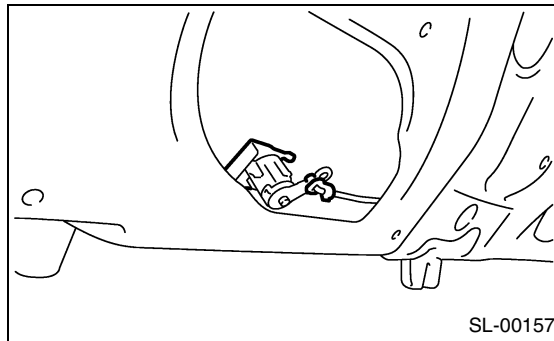

3. REAR GATE

- 1) Remove the rear gate trim. <Ref. to EI-53, REMOVAL, Rear Gate Trim.>
- 2) Remove the rod clamp. Remove the lock plate. Replace the key cylinder.

