


26.Keyless Entry Control Mod- ule

A: REMOVAL

- 1) Disconnect the ground terminal from battery.
- 2) Remove the instrument panel lower cover. <Ref. to EI-43, REMOVAL, Instrument Panel Assembly.>
- 3) Remove the nut, then remove the keyless entry control module while disconnecting the connector.

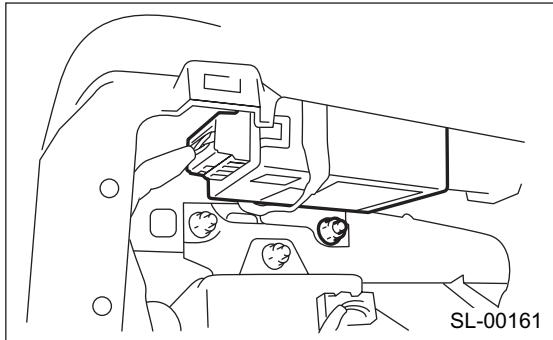

B: INSTALLATION

Install in the reverse order of removal.