

## 28.Keyless Transmitter


### A: REMOVAL

#### 1. TRANSMITTER BATTERY

Remove the battery from the transmitter.

NOTE:

To prevent static electricity damage to the transmitter printed circuit board, touch the steel area of building with hand to discharge static electricity carried on body or clothes before disassembling the transmitter.

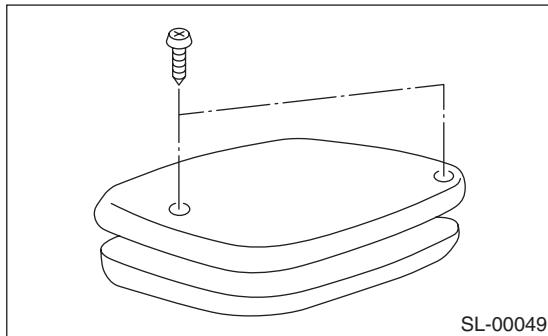

### B: INSTALLATION

#### 1. TRANSMITTER BATTERY

Install in the reverse order of removal.


### C: INSPECTION

#### 1. TRANSMITTER BATTERY

Measure the voltage between the battery (+) terminal and (-) terminal.

NOTE:

- Battery discharge occurs during the measurement. Complete the measurement within 5 seconds.
- During the battery voltage measurement, the voltage falls more than 1.8 volts in 3 seconds period.

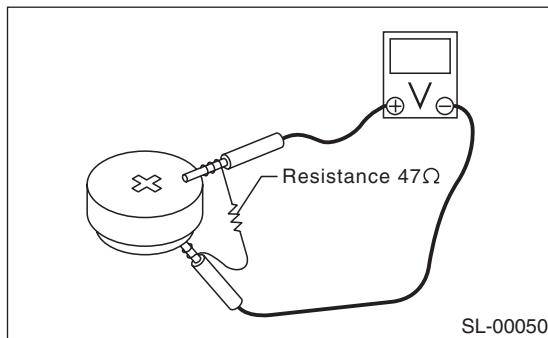

Tester connection		Standard
(+)	(-)	
Battery (+) terminal	Battery (-) terminal	More than 2 V

If NG, replace the battery. (Use CR2032 or equivalent.)

### D: REPLACEMENT

#### 1. TRANSMITTER PROGRAMMING

NOTE:

Perform the programming when the transmitter is replaced and when an additional transmitter is required.

NOTE:

Finish the operation from step 1) through 4) within 45 seconds.

- 1) Sit on the driver's seat and close all doors, rear gate and trunk lid.
- 2) Open the driver's door.
- 3) Close the driver's door.
- 4) Turn the ignition switch from ON to LOCK ten times within 15 seconds.

NOTE:

Do not start the engine at this time.

- 5) The horn chirps one time to indicate that the system has entered in the programming mode.
- 6) Open the driver's door.
- 7) Close the driver's door.
- 8) Press any button on the transmitter that you wish to program into the system.
- 9) Horn will chirp two times to indicate that the transmitter has been programmed.

NOTE:

Any additional transmitter can also be programmed at this time. Repeat steps 6) through 9) for an additional transmitter.

- 10) Remove the ignition key from the ignition switch.
- 11) The horn will chirp three times to indicate that the system has exited the programming mode.
- 12) Check the keyless entry system properly operates by operating each transmitter.

## KEYLESS TRANSMITTER

SECURITY AND LOCKS

---