


7. Front Door Latch Assembly

A: REMOVAL

- 1) Disconnect the ground terminal from battery.
- 2) Remove the front door trim. <Ref. to EI-38, REMOVAL, Front Door Trim.>
- 3) Remove the sealing cover. <Ref. to EB-14, REMOVAL, Front Sealing Cover.>
- 4) Remove the front inner remote. <Ref. to SL-32, REMOVAL, Front Inner Remote.>
- 5) Disconnect rod lock knob and bell crank.
- 6) Remove the three screws and bolt.

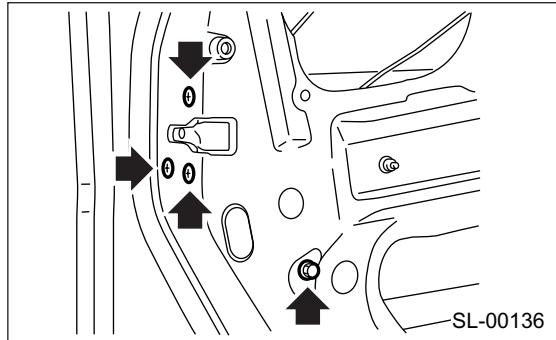

- 7) Disconnect the connector. Remove the front door latch assembly.

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:

Make sure the lock works properly after installation.

C: INSPECTION

- 1) Make sure the rod is not deformed.
- 2) Make sure the lever and rod work smoothly.