



10. Rear Wiper Motor

A: REMOVAL

- 1) Disconnect the ground terminal from battery.
- 2) Remove the rear wiper arm.
- 3) Remove the cap (A), nut (B), and spacer (C) from rear wiper shaft.

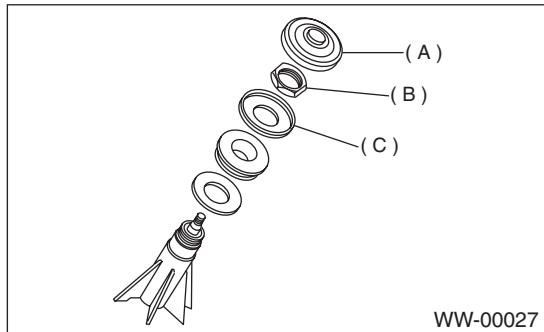


- 4) Remove the rear gate lower trim. <Ref. to EI-53, REMOVAL, Rear Gate Trim.>
- 5) Unclip the clip of harness and disconnect connector of wiper motor.
- 6) Loosen the bolts to remove wiper motor assembly (A).

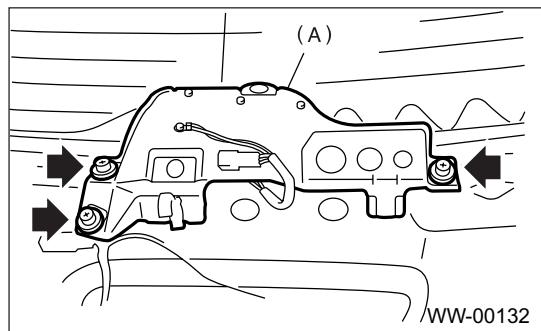


B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Install the rear wiper cushion with the arrow mark facing up, as shown in the figure.

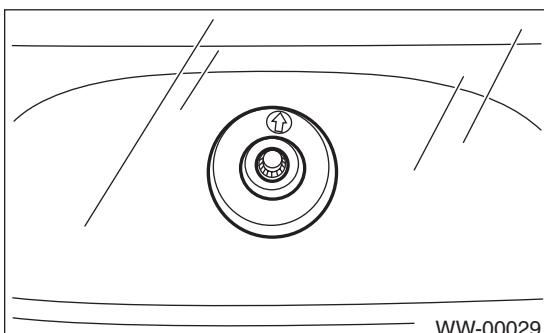


C: INSPECTION

- 1) Connect the battery to wiper motor connector and confirm that wiper motor operates.

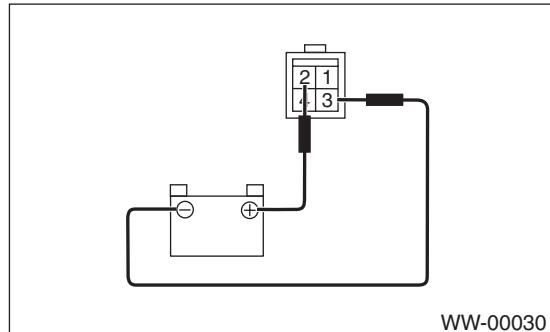

- 2) Connect the battery to terminal of connector and remove the terminal connections with motor rotated, and stop the wiper motor through operation.

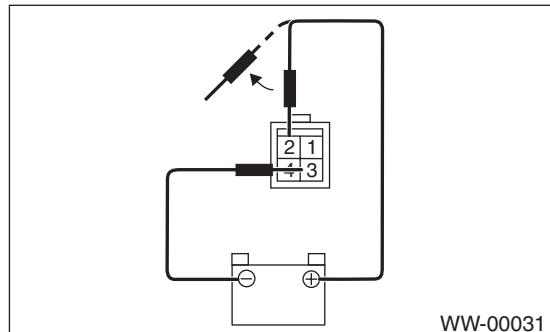

- 3) Connect the battery and confirm that the motor stops at automatic stop position after the motor operates at low speed again.

