


## 11. Rear Washer Nozzle

### A: REMOVAL

- 1) Remove the high-mount stop light. <Ref. to LI-24, REMOVAL, High-mounted Stop Light.>
- 2) Remove the washer hose from the washer nozzle.
- 3) Open the clips on the underside of the hood with a thin screwdriver or other tool, and remove the washer nozzle.

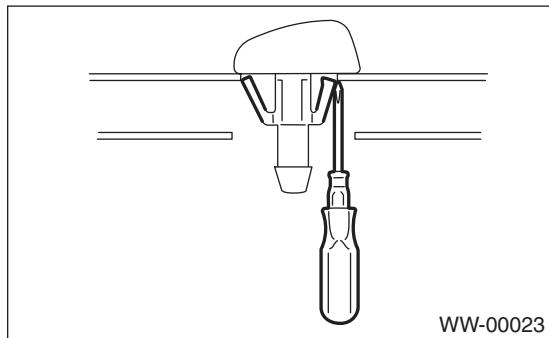

### B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Adjust the position of the washer liquid sprayer. <Ref. to WW-18, ADJUSTMENT, Rear Washer Nozzle.>

### C: INSPECTION

- Make sure the nozzle and hose are not clogged.
- Make sure the hose is not bent.

### D: ADJUSTMENT

- 1) Turn the wiper switch to OFF position.
- 2) When the vehicle stops, adjust the washer injection position as shown in the figure.

*Injection position:*

**A: 39 mm (1.54 in)**

**B: 72°**

