


## 4. Wiper Blade

### A: REMOVAL

While pushing the locking clip (A) up, pull out the blade from arm to arrow direction.

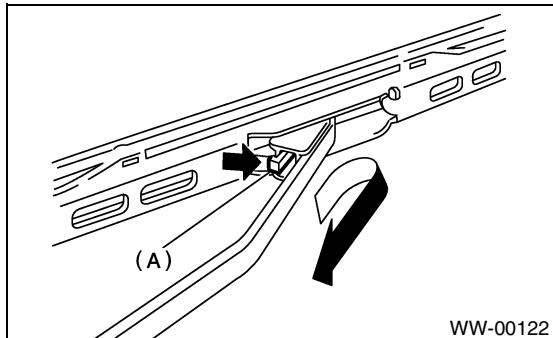


### B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Confirm that the clip is locked securely.

### C: DISASSEMBLY


#### 1. METAL TYPE

Pull on side (A) of the wiper rubber stopper and remove the rubber from the blade assembly.

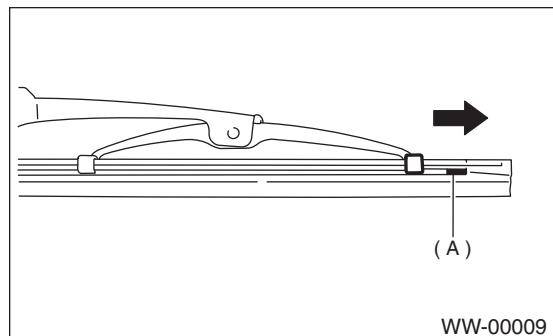

#### 2. RESIN TYPE


Pull the wiper rubber top slightly from the stopper and pull out fully.

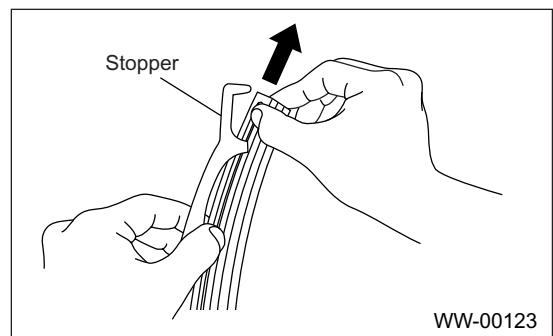


### D: ASSEMBLY

#### 1. METAL TYPE

- 1) Insert the wiper rubber onto the blade so that the stopper is in the position shown.

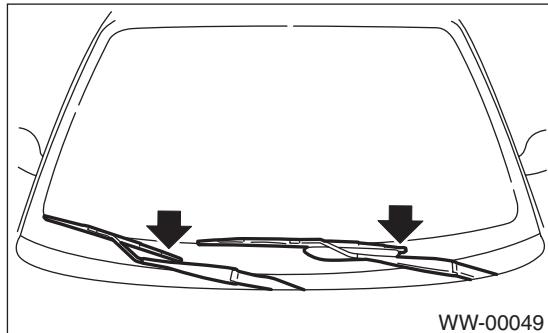


- 2) Make sure the wiper rubber is securely fastened to the pull stopper (A).

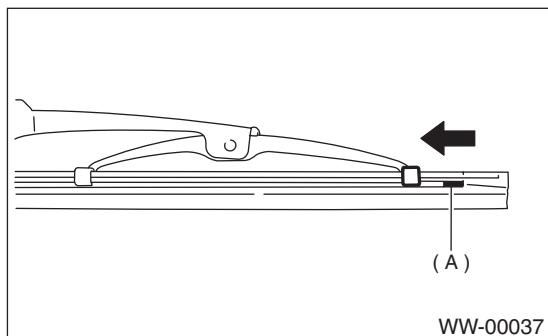

# WIPER BLADE


## WIPER AND WASHER SYSTEMS
 
### 2. RESIN TYPE




WW-00124

1) Insert the wiper rubber through the claw (B).

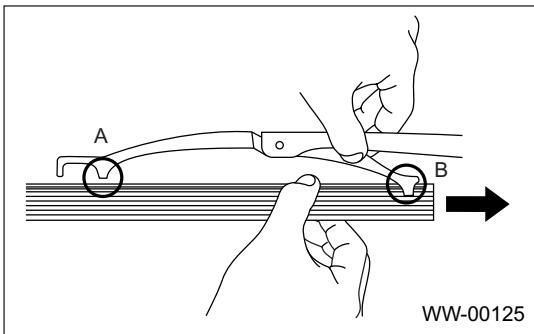


3) Insert the wiper rubber into the claw (A).

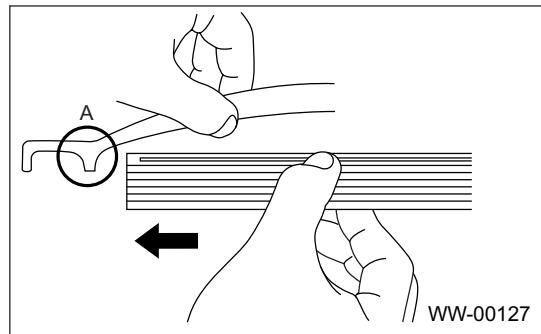

WW-00127

2) Insert the wiper rubber top until it protrudes about 20mm (0.79 in) from the stopper (D).

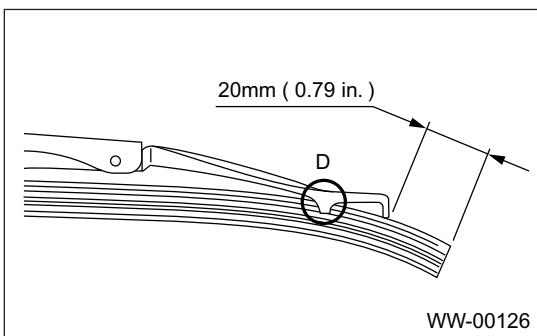

WW-00126

### E: INSPECTION

1) When the wiper does not perform well, inspect the following:

- Make sure the movable part of the blade assembly moves smoothly.
- Make sure the wiper rubber is not deformed or damaged.

2) Replace with a new part if damage is found.