


5. Washer Tank and Motor

A: REMOVAL

- 1) Open the hood.
- 2) Disconnect the ground terminal from battery.
- 3) Remove the two bolts, hose and connector and then remove the tank.

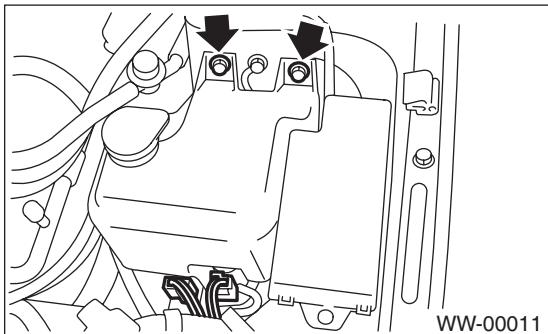


B: INSTALLATION

Install in the reverse order of removal.

C: DISASSEMBLY

Pull out the washer motor from tank.

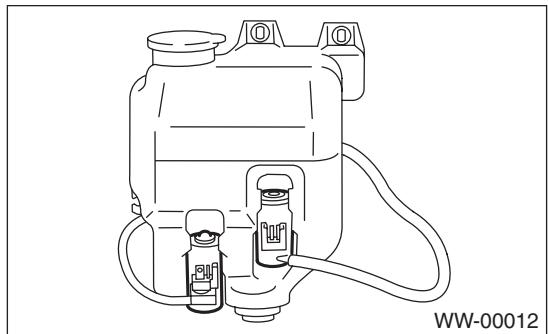

D: ASSEMBLY

- 1) Assemble in the reverse order of disassembly.
- 2) Confirm that water does not leak from installation area of motor.

E: INSPECTION

Apply battery voltage to the connector terminal of the washer motor and make sure the motor operates.

