


6. Front Wiper Arm

A: REMOVAL


- 1) Open the hood.
- 2) Remove the cap.
- 3) Loosen the nut to remove arm.

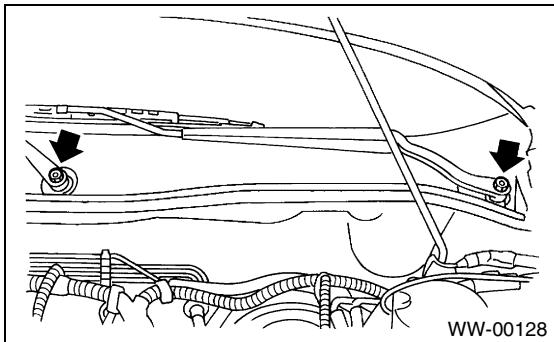

WW-00128

C: ADJUSTMENT


Operate the wiper once. Align the wiper blade to ceramic print point mark (A) of front window pane.

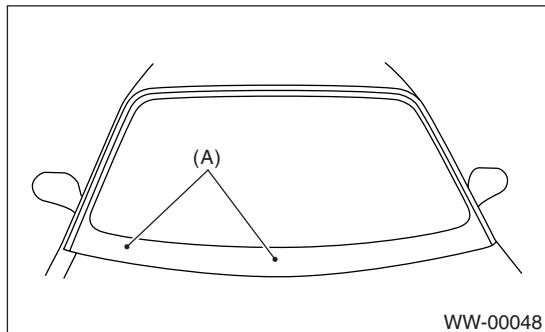

WW-00048

B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Operate the wiper once.
- 3) Align the wiper blade to ceramic print point mark (A) of front window pane.

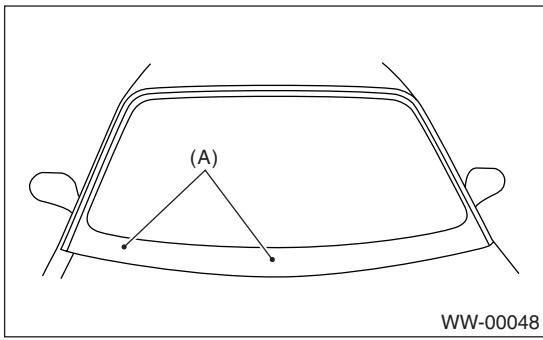

WW-00048