

6. Front Tone Wheel

A: REMOVAL

Refer to Front Drive Shaft, because the front tone wheel is integrated with front drive shaft.

<Ref. to DS-32, REMOVAL, Front Drive Shaft.>

B: INSTALLATION

Refer to Front Drive Shaft, because the front tone wheel is integrated with front drive shaft.

<Ref. to DS-32, INSTALLATION, Front Drive Shaft.>

C: INSPECTION

Visually check the tone wheel's teeth (44 pieces) for cracks or dents. If necessary, replace the tone wheel with a new one.

NOTE:

Replace the BJ assembly with a new one as a single unit if there is any defect found on the tone wheel, since it is unitized with the BJ assembly of drive shaft.