

## 7. Rear Tone Wheel

### A: REMOVAL

Refer to Rear Hub, because the rear tone wheel is installed on the rear hub.

<Ref. to DS-23, REMOVAL, Rear Axle.>

### B: INSTALLATION

Refer to Rear Hub, because the rear tone wheel is installed on the rear hub.

<Ref. to DS-26, INSTALLATION, Rear Axle.>

### C: INSPECTION

Visually check the tone wheel's teeth (44 pieces) for cracks or dents. If necessary, replace the tone wheel with a new one.