


4. Electrical Components Location

A: LOCATION

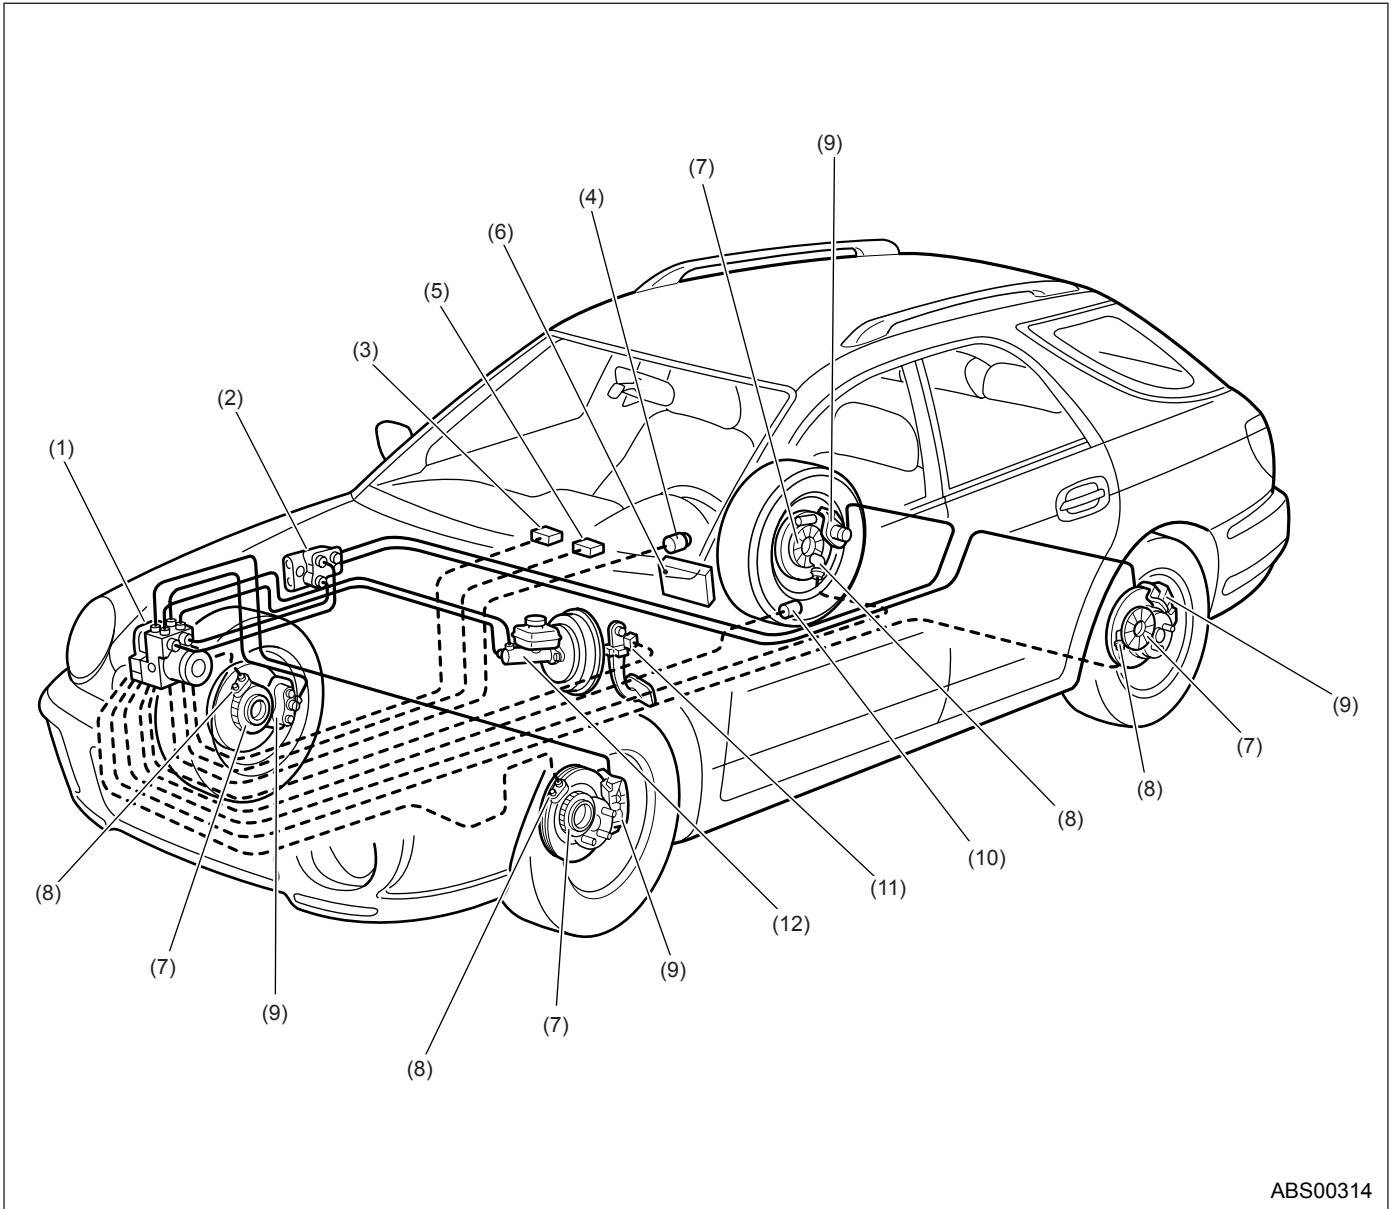


ABS00314


- | | | |
|---|---|------------------------|
| (1) ABS control module and hydraulic control unit (ABSCM & H/U) | (5) Data link connector (for Subaru Select Monitor) | (8) ABS sensor |
| (2) Proportioning valve | (6) Transmission control module (AT vehicles only) | (9) Wheel cylinder |
| (3) Diagnosis connector | (7) Tone wheel | (10) G sensor |
| (4) ABS warning light | | (11) Stop light switch |
| | | (12) Master cylinder |

ELECTRICAL COMPONENTS LOCATION


ABS (DIAGNOSTICS)

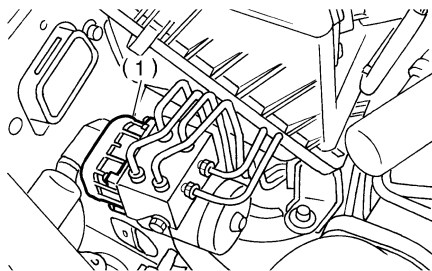


ABS00101

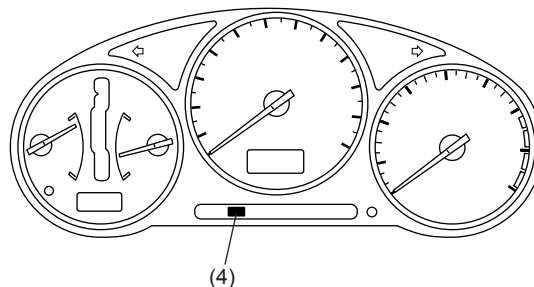


ABS00316

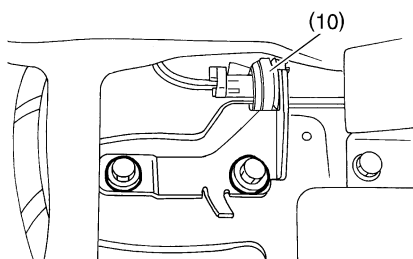

ABS00102

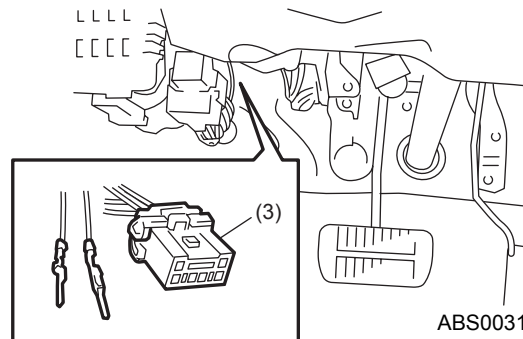


ABS00317

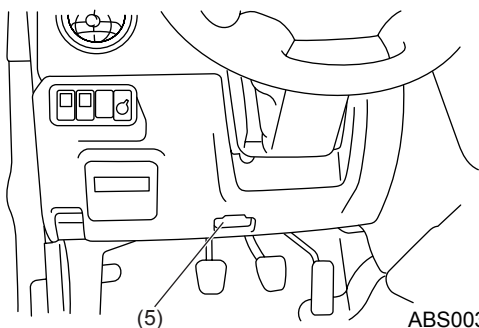


ABS00315

FRONT

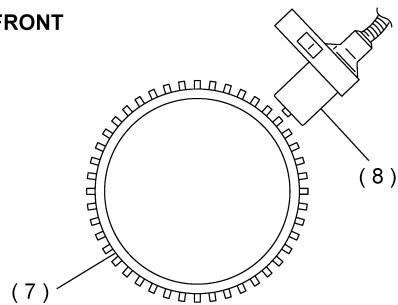

ABS00107

REAR

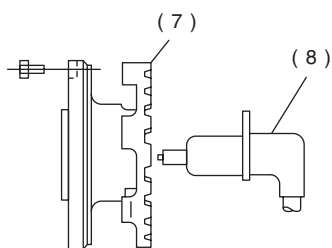

ABS00104

SUBARU.