

# READ DIAGNOSTIC TROUBLE CODES (DTC)


ABS (DIAGNOSTICS)

## 7. Read Diagnostic Trouble Codes (DTC)

### A: OPERATION

#### 1. WITHOUT SUBARU SELECT MONITOR

1) Take out the diagnosis connector from side of driver's seat.

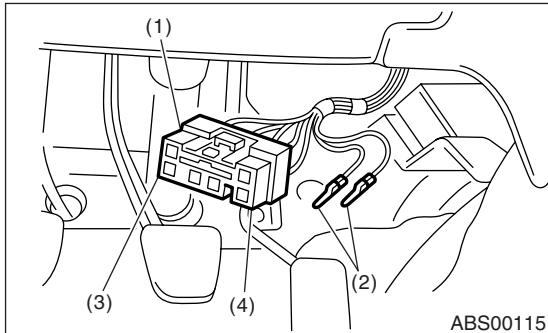

- (1) Diagnosis connector
- (2) Diagnosis terminal
- (3) Terminal 3
- (4) Terminal 6


- 2) Turn ignition switch to OFF.
- 3) Connect the diagnosis terminal to diagnosis connector terminal 6.
- 4) Turn ignition switch to ON.
- 5) ABS warning light is set in the diagnostic mode and blinks to identify DTC.
- 6) After the start code (11) is shown, the DTCs will be shown in order of the last information first. These repeat for a maximum of 3 minutes.

#### NOTE:


- When there are no DTCs in memory, only the start code (11) is shown.
- When on-board diagnosis of the ABS control module detects a problem, the information (up to a maximum of three) will be stored in EEPROM as a DTC. When there are more than three, the most recent three will be stored. (Stored codes will stay in memory until they are cleared.)

#### Example of DTC indication

DTC: 21

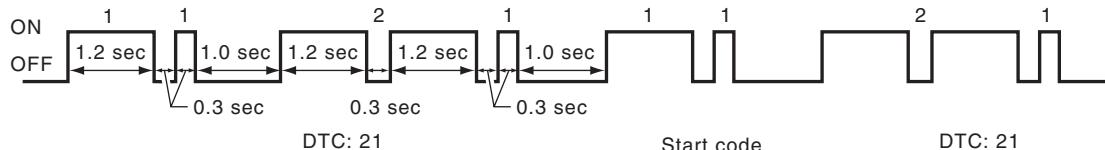

DTC: 22,31

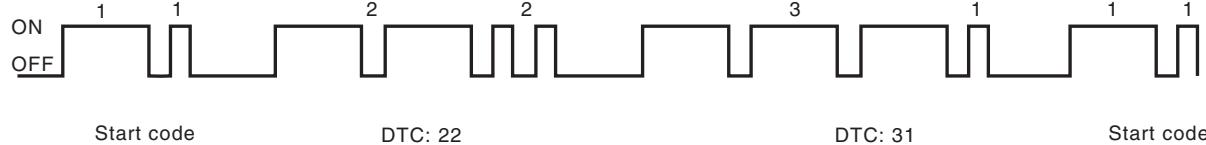

ABS00116

#### 2. WITH SUBARU SELECT MONITOR

Refer to SUBARU SELECT MONITOR for details of DTCs. <Ref. to ABS-18, Subaru Select Monitor.>