


GENERAL DESCRIPTION

PARKING BRAKE

1. General Description

A: SPECIFICATIONS

Model	Rear drum brake	Rear disc brake
Type	Mechanical on rear brakes, drum in disc	
Effective drum diameter	mm (in)	228.6 (9)
Lining dimensions (length × width × thickness)	mm (in)	219.4 × 35.0 × 4.1 (8.64 × 1.378 × 0.161)
Clearance adjustment		Automatic adjustment
Lever stroke	notches/N (kgf, lb)	7 to 8/196 (20, 44)

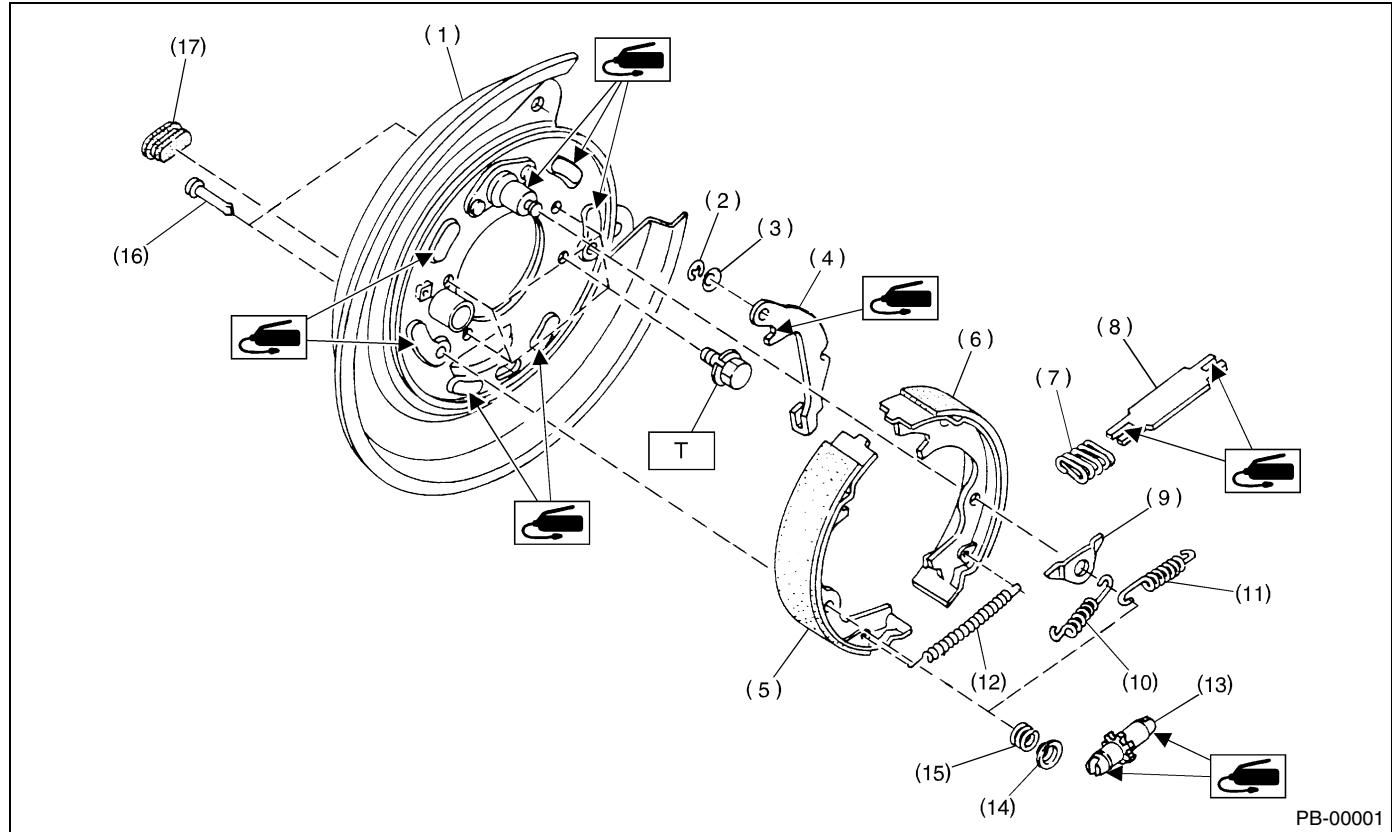B: COMPONENT**1. PARKING BRAKE (REAR DISC BRAKE)**

PB-00001


(1) Back plate	(10) Primary return spring
(2) Retainer	(11) Secondary return spring
(3) Spring washer	(12) Adjusting spring
(4) Lever	(13) Adjuster
(5) Parking brake shoe (Primary)	(14) Shoe hold-down cup
(6) Parking brake shoe (Secondary)	(15) Shoe hold down spring
(7) Strut spring	(16) Shoe hold down pin
(8) Strut	(17) Adjusting hole cover
(9) Shoe guide plate	

Tightening torque: N·m (kgf·m, ft·lb)***T: 53 (5.4, 39)***

GENERAL DESCRIPTION

PARKING BRAKE

2. PARKING BRAKE CABLE

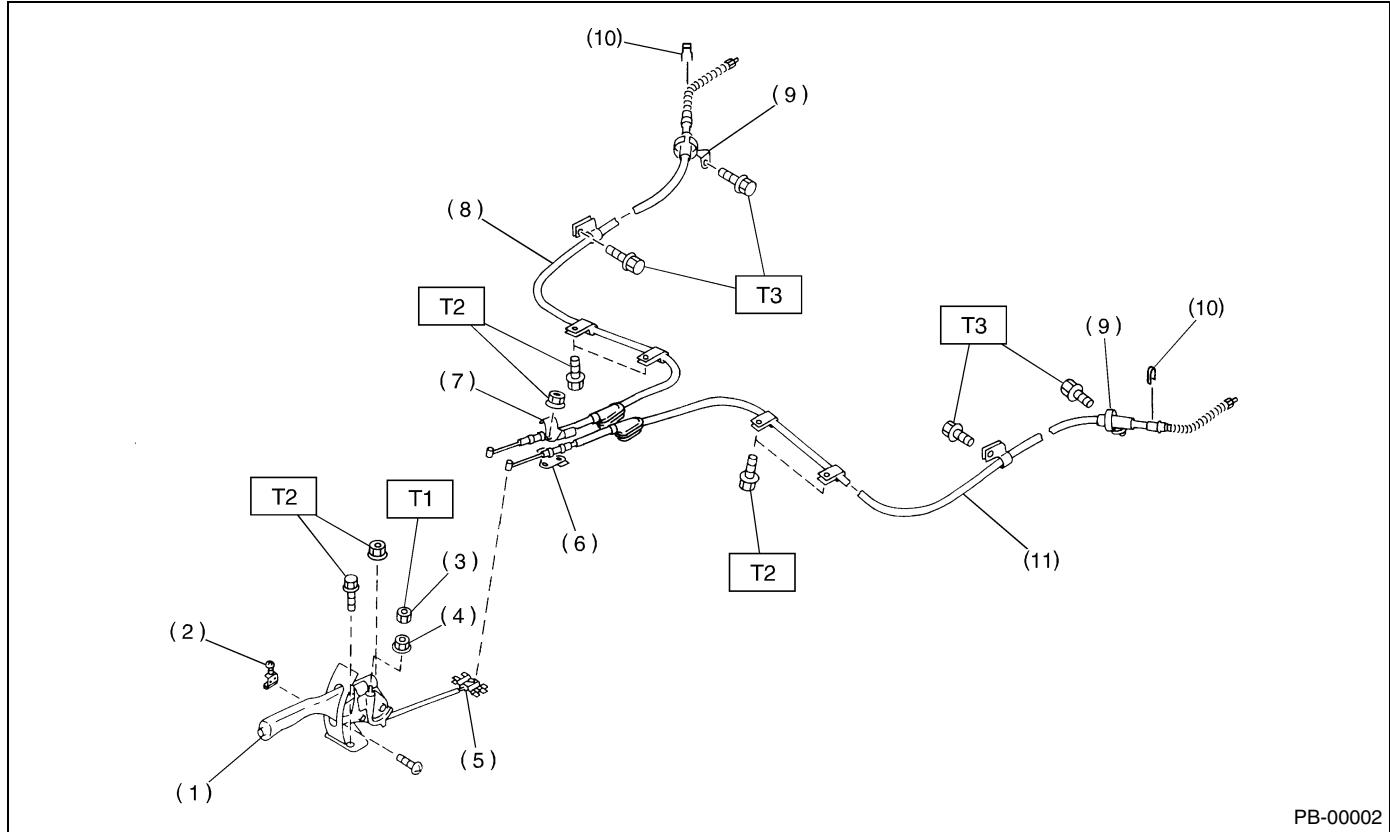

(1) Parking brake lever	(7) Clamp
(2) Parking brake switch	(8) Parking brake cable RH
(3) Lock nut	(9) Cable guide
(4) Adjusting nut	(10) Clamp (Rear disc brake model only)
(5) Equalizer	
(6) Bracket	(11) Parking brake cable LH

Tightening torque: N·m (kgf·m, ft-lb)

T1: 6 (0.6, 4.4)

T2: 18 (1.8, 13.0)

T3: 33 (3.4, 24)

C: CAUTION

- Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust or dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
- Be careful not to burn your hands, because each part on the vehicle is hot after running.
- Use SUBARU genuine grease etc. or the equivalent. Do not mix grease etc. with that of another grade or from other manufacturers.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or safety stands at the specified points.
- Apply grease onto sliding or revolution surfaces before installation.
- Before installing O-rings or snap rings, apply sufficient amount of grease to avoid damage and deformation.
- Before securing a part on a vise, place cushioning material such as wood blocks, aluminum plate, or shop cloth between the part and the vise.
- Keep grease etc. away from parking brake shoes.