


### 7. Rear Crossmember

#### A: REMOVAL


**CAUTION:**

**Do not subject the ABS sensor harness to excessive tension. (Models equipped with ABS)**

- 1) Separate the front exhaust pipe and rear exhaust pipe.
- 2) Remove the rear exhaust pipe and muffler.
- 3) Remove the rear differential.  
<Ref. to DI-20, REMOVAL, Rear Differential.>
- 4) Place a transmission jack under rear crossmember.

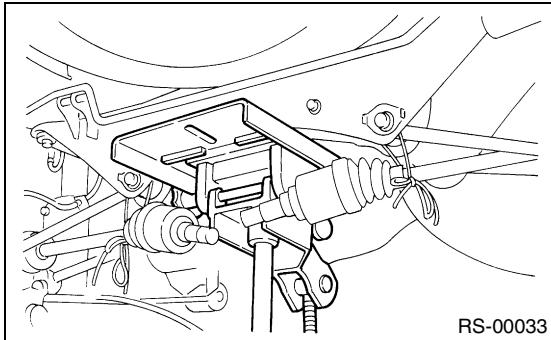

- 5) Remove the bolts securing crossmember to vehicle body, and remove the crossmember.

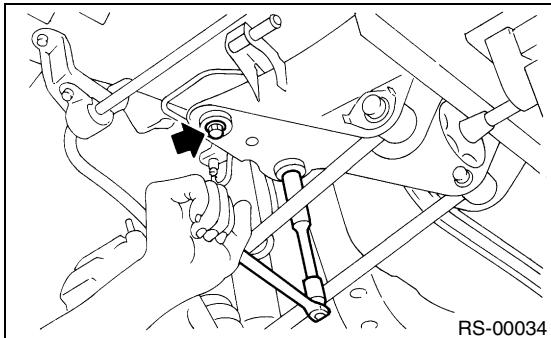

- 6) Scribe an alignment mark on the rear lateral link cam bolt and crossmember.
- 7) Remove the front and rear lateral links by loosening nuts.

#### B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) For installation and tightning torque of rear differential:

<Ref. to DI-21, INSTALLATION, Rear Differential.>

- 3) Always tighten the rubber bushing when wheels are in full contact with the ground and vehicle is curb weight.

**NOTE:**

Check the wheel alignment and adjust if necessary.

#### C: INSPECTION

Check the removed parts for wear, damage and cracks, and correct or replace if defective.