

4. Oil Seal

A: NOTE

For removal, installation and inspection work, refer to "AT" or "MT" section.

AT model:

<Ref. to AT-47, Extension Case Oil Seal.>

MT model:

<Ref. to MT-36, Oil Seal.>