


2. Tire

A: INSPECTION

- 1) Take stone, glass, nail etc. off the tread groove.
- 2) Replace the tire:

CAUTION:

- When replacing a tire, make sure to use only the same size, construction and load range as originally installed.
- Avoid mixing radial, belted bias or bias tires on the vehicle.

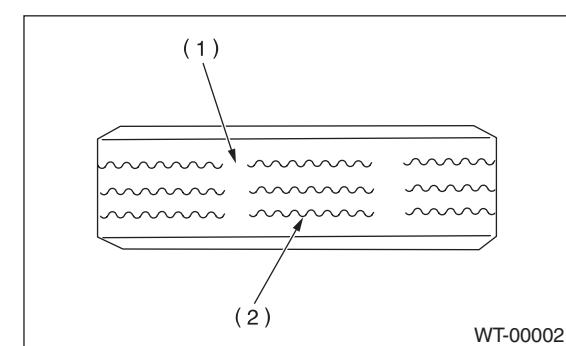

(1) Tread wear indicator
(2) Tire tread

1. TIRE ROTATION

If tires are maintained at the same positions for a long period of time, uneven wear results. Therefore, they should be periodically rotated.

This lengthens service life of tires.

CAUTION:

When rotating tires, replace unevenly worn or damaged tires with new ones.

