


7. Full Wheel Cap

A: REMOVAL

Pry off the full wheel cap with a wheel cap remover inserted between openings in the cap.

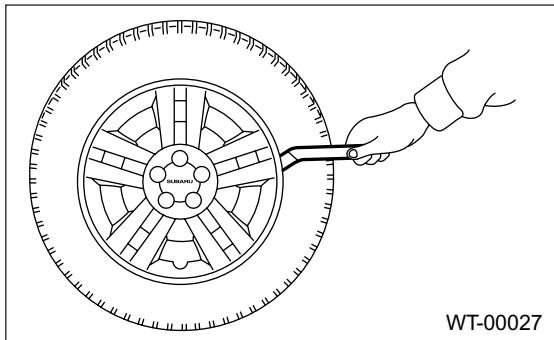

B: INSTALLATION

Align the valve hole in the wheel cap with the valve on the wheel and secure the wheel cap by tapping four points by hand.

C: INSPECTION

- 1) Check the wheels for missing wheel caps.
- 2) Check the pawls of wheel caps for damage or bend.
- 3) Check the wheel caps for cracks.