



10. Radiator Sub Fan and Fan Motor

A: REMOVAL


- 1) Disconnect the battery ground cable.

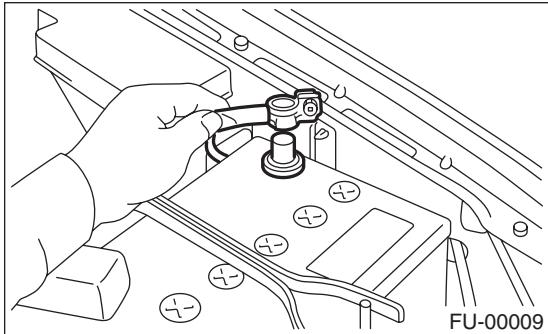

- 2) Lift-up the vehicle.
- 3) Remove the under cover.
- 4) Remove the radiator under cover.
- 5) Disconnect the connector of sub fan motor.

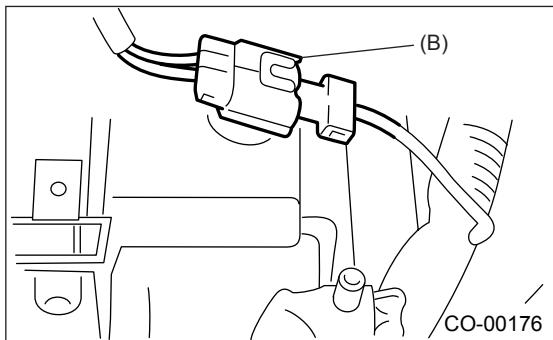


- 6) Lower the vehicle.
- 7) Remove the air intake duct. (Turbo model)

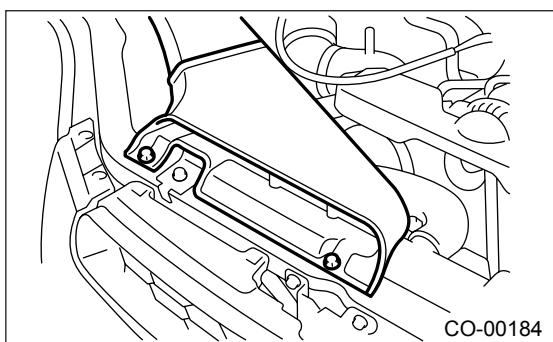

- 8) Remove the bolts which hold sub fan shroud to the radiator.
- 9) Remove the over flow pipe. (Turbo model)

- 10) Remove the radiator sub fan shroud through the under side of vehicle.

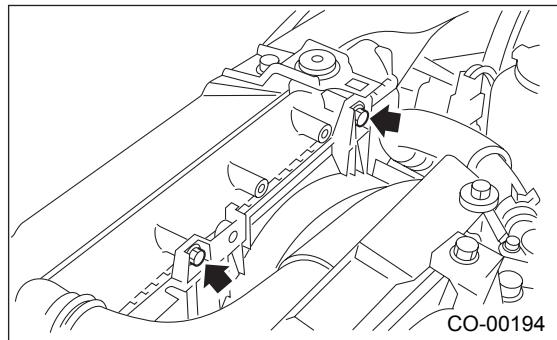


B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

4.9 N·m (0.50 kgf·m, 3.6 ft-lb)

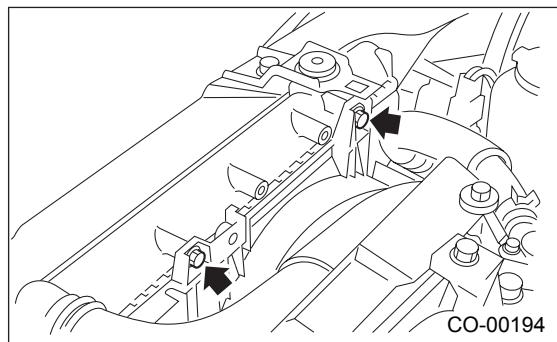


RADIATOR SUB FAN AND FAN MOTOR

COOLING


C: DISASSEMBLY

- 1) Remove the clip which holds motor harness onto the shroud.

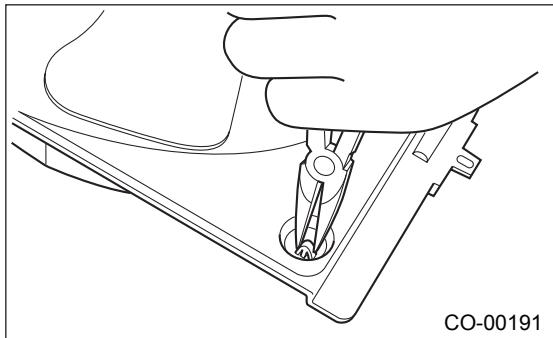


CO-00191

- 2) Remove the nut which holds fan itself onto the fan motor and shroud assembly.

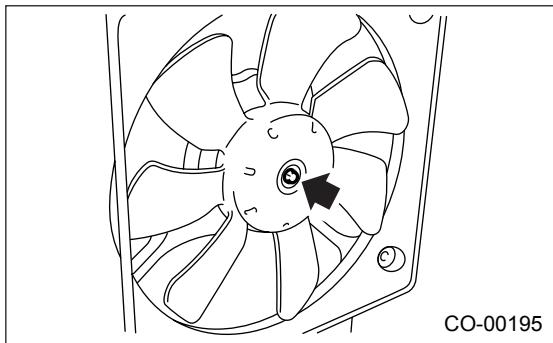

CO-00195

- 3) Remove the bolts which install fan motor onto the shroud.

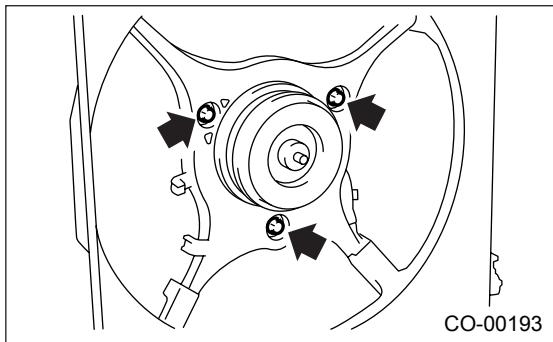


CO-00193

D: ASSEMBLY

Assemble in the reverse order of disassembly.

Tightening torque:


4.4 N·m (0.45 kgf-m, 3.3 ft-lb)

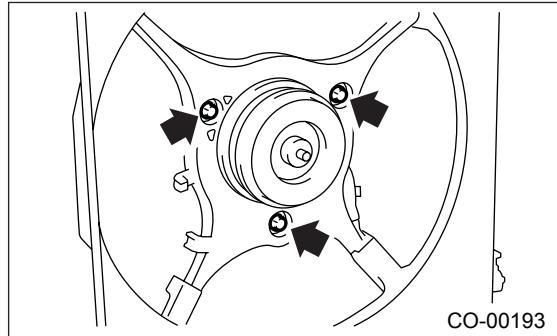

CO-00193

Tightening torque:

3.4 N·m (0.35 kgf-m, 2.5 ft-lb)

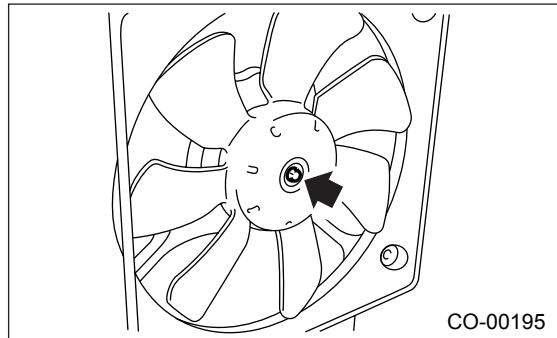

CO-00195