


11. Reservoir Tank

A: REMOVAL

- 1) Disconnect the over flow hose from the radiator filler neck position.
- 2) Remove the bolts which install reservoir tank onto the radiator main fan shroud.
- 3) Remove the reservoir tank.

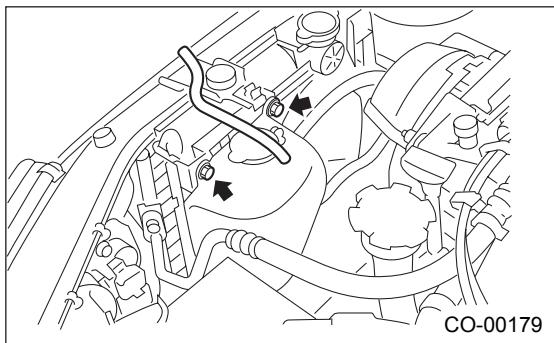


B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

4.9 N·m (0.50 kgf·m, 3.6 ft-lb)

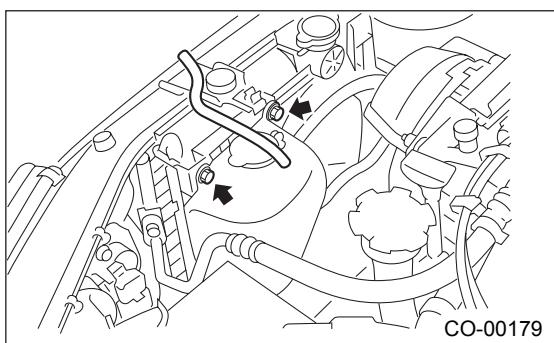

C: INSPECTION

Make sure the engine coolant level is between full and low.