


12. Coolant Filler Tank

A: REMOVAL


WARNING:

The radiator is pressurized. Wait until engine cools down before working on the radiator.

- 1) Drain the coolant about 3.0 (3.2 US qt, 2.6 Imp qt). <Ref. to CO(H4SO)-29, DRAINING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>
- 2) Remove the air cleaner upper cover and air intake boot. <Ref. to IN(H4DOTC)-7, REMOVAL, Air Cleaner.>
- 3) Remove the air cleaner element.
- 4) Disconnect the engine coolant hoses from the coolant filler tank.

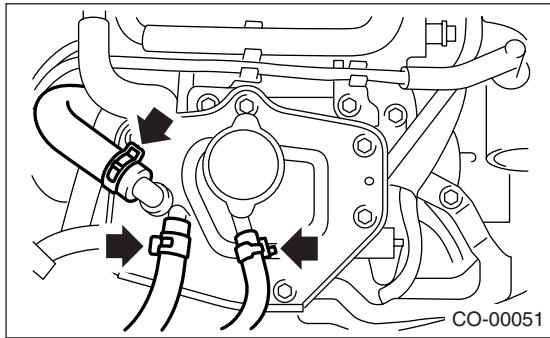

- 5) Remove the bolts and nut which install coolant filler tank.
- 6) Disconnect the engine coolant hose which connects the under side of coolant filler tank.
- 7) Remove the coolant filler tank.

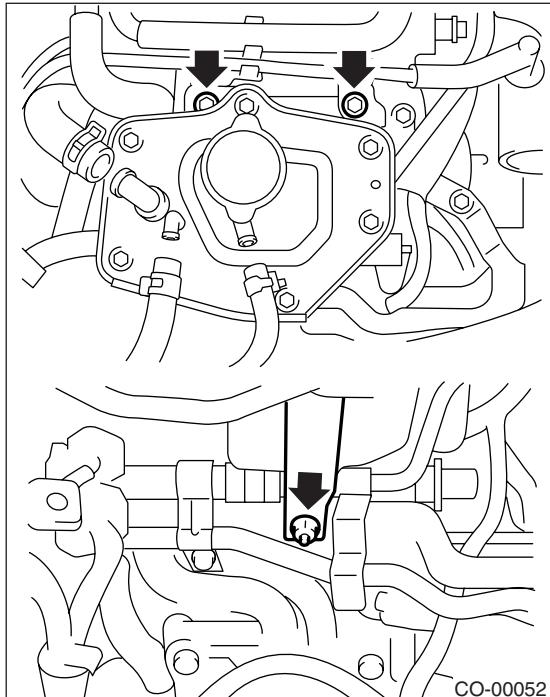



B: INSTALLATION

- 1) Install in the reverse order of removal.

Tightening torque:

T1: 19 N·m (1.9 kgf·m, 13.7 ft·lb)

T2: 21 N·m (2.1 kgf·m, 15.2 ft·lb)

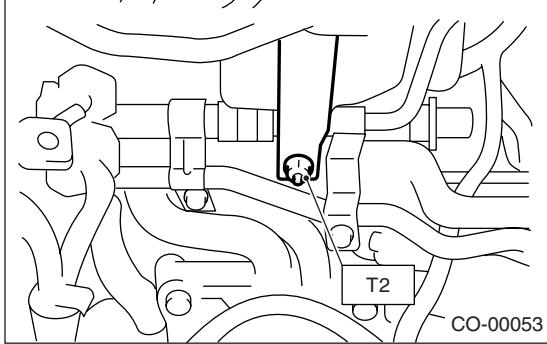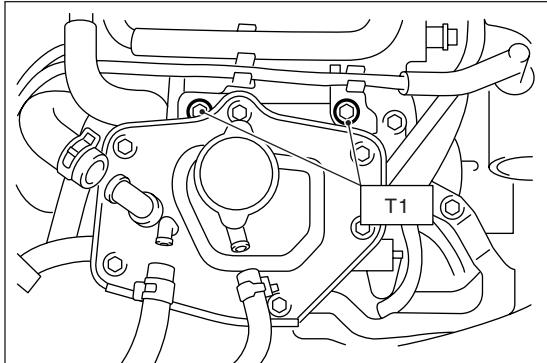

- 2) Fill engine coolant. <Ref. to CO(H4SO)-29, FILLING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>