



## 10. Fuel Tank Sensor Control Valve

### A: REMOVAL

- 1) Remove the fuel tank. <Ref. to FU(H4SO)-52, REMOVAL, Fuel Tank.>
- 2) Remove the protector cover.

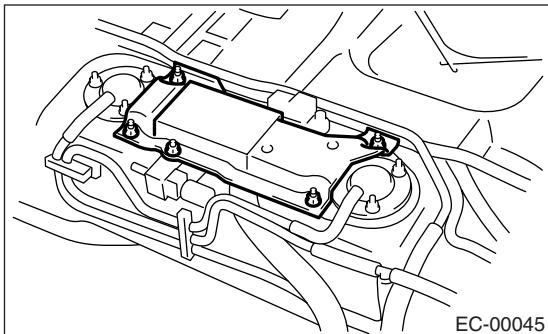

- 3) Disconnect the connector from fuel tank sensor control valve.
- 4) Disconnect the hose, and then remove the fuel tank sensor control valve.

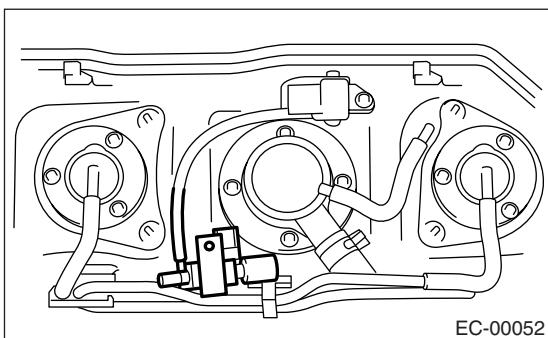


### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

**T1: 7.4 N·m (0.75 kgf·m, 5.4 ft-lb)**

**T2: 4.4 N·m (0.45 kgf·m, 3.3 ft-lb)**

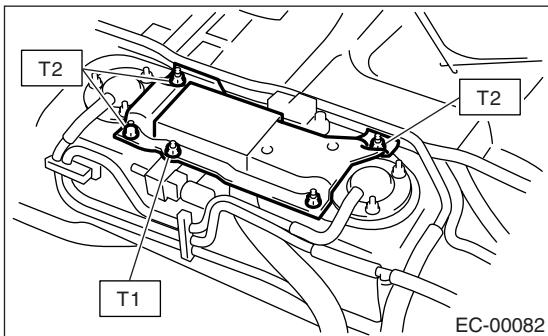

### C: INSPECTION

Make sure the hoses are not cracked or loose.