


## 2. Front Catalytic Converter

### A: REMOVAL

The front and rear catalytic converters and the center exhaust pipe are integrated into one unit. Therefore, the removal procedures are the same as those for the center exhaust pipe. <Ref. to EX(H4SO)-8, REMOVAL, Center Exhaust Pipe.>

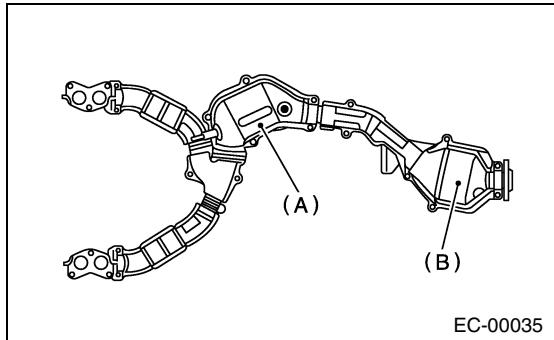


(A) Front catalytic converter

(B) Rear catalytic converter

### B: INSTALLATION

The front and rear catalytic converters and the center exhaust pipe are integrated into one unit. Therefore, the installation procedures are the same as those for the center exhaust pipe. <Ref. to EX(H4SO)-8, INSTALLATION, Center Exhaust Pipe.>

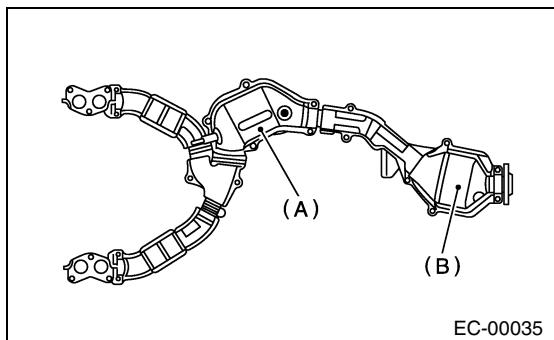

(A) Front catalytic converter

(B) Rear catalytic converter

### C: INSPECTION

- 1) Make sure there are no exhaust leaks from connections and welds.
- 2) Make sure there are no holes or rusting.