

REAR CATALYTIC CONVERTER

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

3. Rear Catalytic Converter

A: REMOVAL

The front and rear catalytic converters and the center exhaust pipe are integrated into one unit. Therefore, the removal procedures are the same as those for the front catalytic converter. <Ref. to EC(H4SO)-3, REMOVAL, Front Catalytic Converter.>

B: INSTALLATION

The front and rear catalytic converters and the center exhaust pipe are integrated into one unit. Therefore, the installation procedures are the same as those for the front catalytic converter. <Ref. to EC(H4SO)-3, INSTALLATION, Front Catalytic Converter.>

C: INSPECTION

- 1) Make sure there are no exhaust leaks from connections and welds.
- 2) Make sure there are no holes or rusting.