


PURGE CONTROL SOLENOID VALVE

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


5. Purge Control Solenoid Valve

A: REMOVAL

- 1) Disconnect the ground cable from battery.

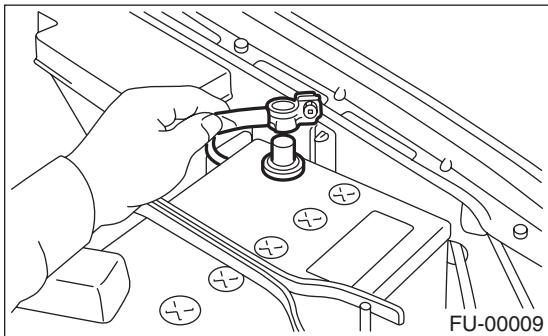


- 2) Remove the bolt which installs purge control solenoid valve onto intake manifold.

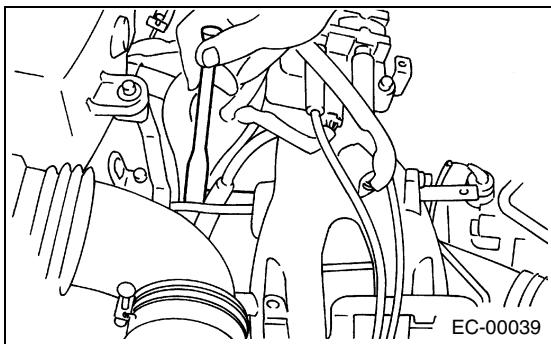

- 3) Take out purge control solenoid valve through the bottom of the intake manifold.

- 4) Disconnect the connector and hoses from purge control solenoid valve.

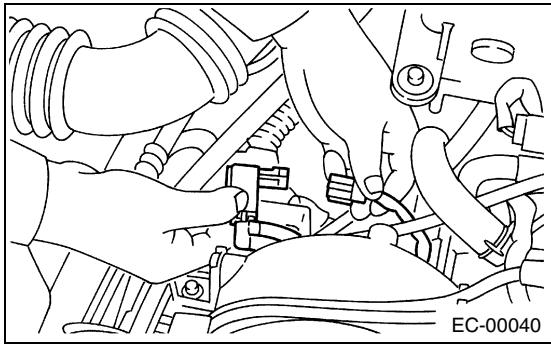


B: INSTALLATION

Install in the reverse order of removal.


Tightening torque:

19 N·m (1.9 kgf·m, 14.0 ft-lb)

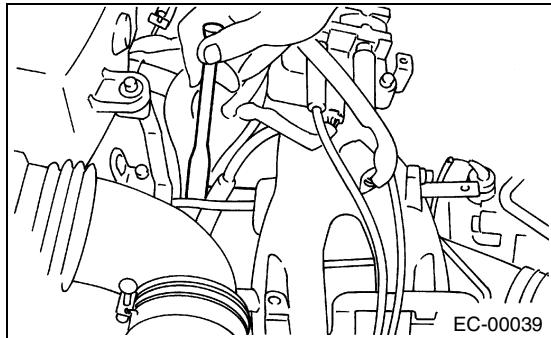

NOTE:

Connect the evaporation hose as shown in the following figure.

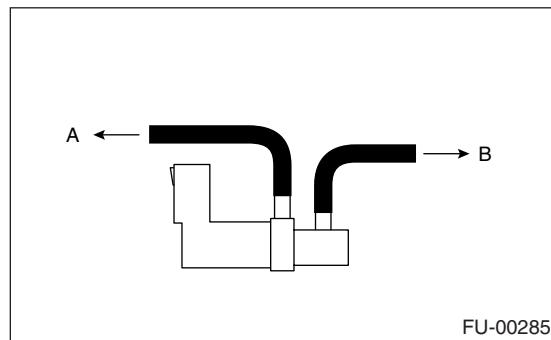

- (A) To fuel pipe
- (B) To intake manifold

C: INSPECTION

Make sure the hoses are not cracked or loose.