
8. Fuel Sub Level Sensor

A: REMOVAL

For removal procedure, refer to “FU” section. <Ref. to FU(H4SO)-63, REMOVAL, Fuel Sub Level Sensor.>

B: INSTALLATION

For installation procedure, refer to “FU” section. <Ref. to FU(H4SO)-64, INSTALLATION, Fuel Sub Level Sensor.>