



## 12. Air Assist Injector Solenoid Valve

### A: REMOVAL


- 1) Disconnect the ground cable from battery.

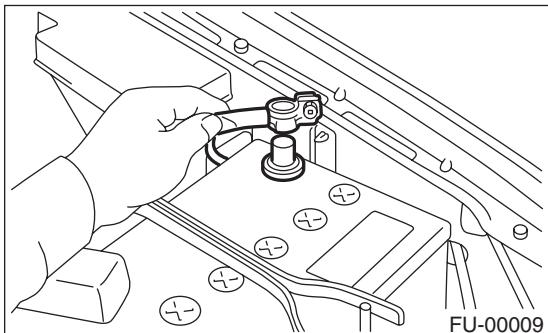

- 2) Disconnect the connector from the air assist injector solenoid valve and disconnect the air bypass hoses.

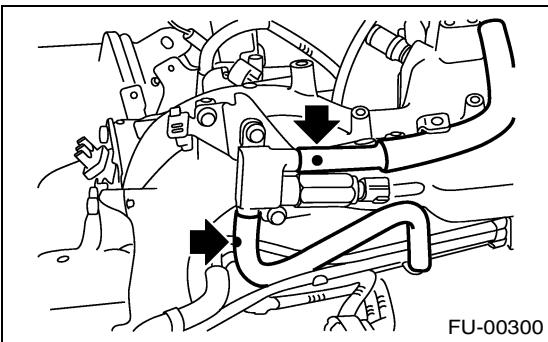

- 3) Remove the air assist injector solenoid valve from the intake manifold.

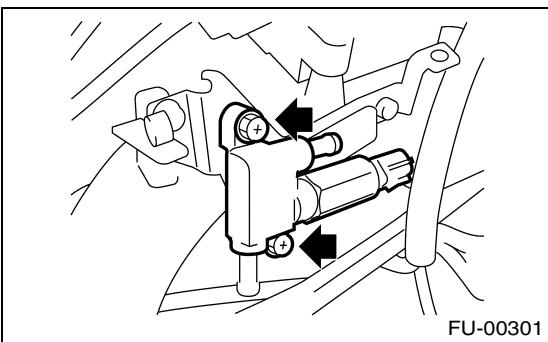

### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

**6.4 N·m (0.65 kgf·m, 4.7 ft-lb)**

