


ENGINE CONTROL MODULE

FUEL INJECTION (FUEL SYSTEMS)

16. Engine Control Module

A: REMOVAL

- 1) Disconnect the ground cable from battery.

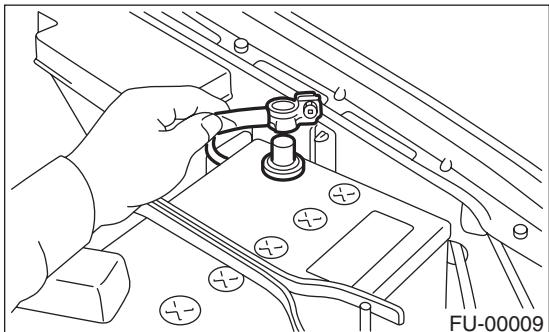


- 2) Remove the lower inner trim of passenger side.

<Ref. to EI-47, REMOVAL, Lower Inner Trim.>


- 3) Detach the floor mat of front passenger seat.

- 4) Remove the protect cover.

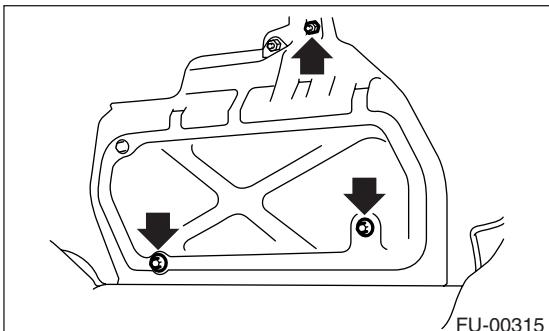

- 5) Remove the nuts (A) which hold ECM to the bracket.

- 6) Remove the clip (B) from the bracket.

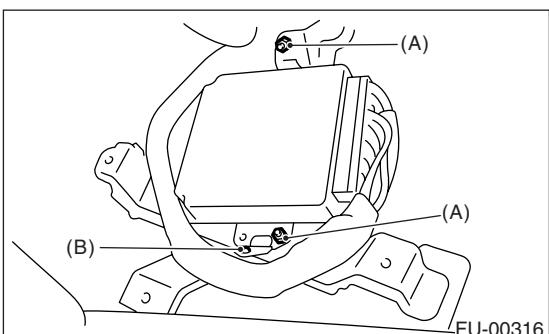

- 7) Disconnect the ECM connectors and take out the ECM.

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:

When replacing the ECM, be careful not to use the wrong spec. ECM to avoid any damage on fuel injection system.

Tightening torque:

5 N·m (0.5 kgf·m, 3.6 ft-lb)