


THROTTLE BODY

FUEL INJECTION (FUEL SYSTEMS)


2. Throttle Body

A: REMOVAL


- 1) Disconnect the ground cable from battery.

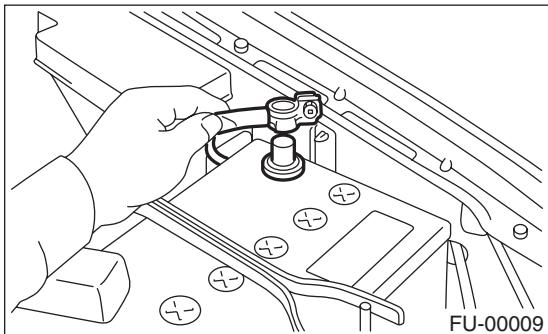

- 2) Remove the air cleaner case. <Ref. to IN(H4SO)-6, REMOVAL, Air Cleaner Case.>
- 3) Disconnect the accelerator cable (A).
- 4) Disconnect the cruise control cable (B). (vehicles with cruise control)

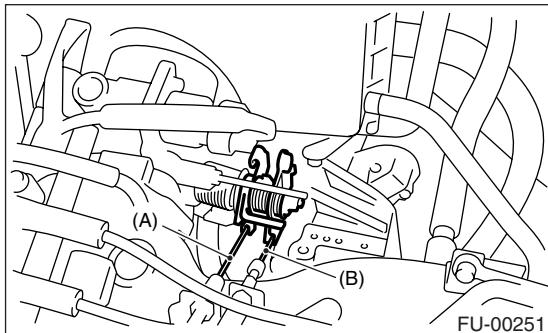


- 5) Disconnect the connectors from idle air control solenoid valve, throttle position sensor and pressure sensor.
- 6) Disconnect the air by-pass hose from the throttle body.

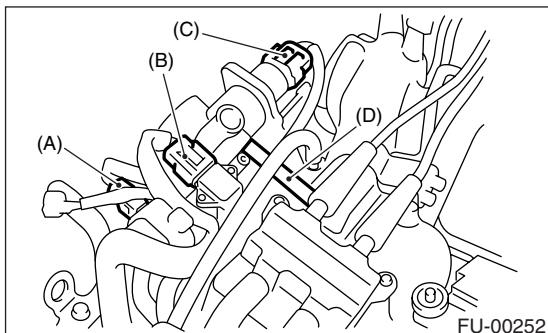

- (A) Throttle position sensor
- (B) Pressure sensor
- (C) Idle air control solenoid valve
- (D) Air by-pass hose

- 7) Disconnect the engine coolant hoses (A) from the throttle body.
- 8) Remove the bolts (B) which install throttle body to the intake manifold.

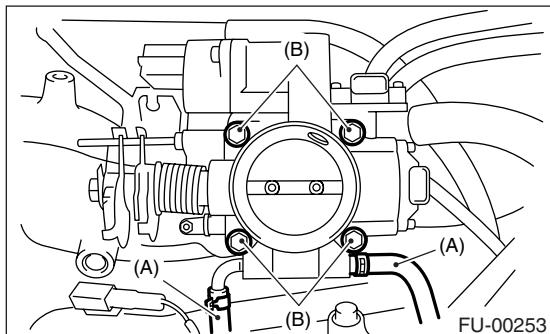

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Replace the gaskets with new ones.

Tightening torque:

Throttle body:

22 N·m (2.2 kgf·m, 15.9 ft-lb)