

23. Fuel Level Sensor

A: REMOVAL


WARNING:

- Place “NO FIRE” signs near the working area.
- Be careful not to spill fuel on the floor.


NOTE:

The fuel level sensor is built in the fuel pump assembly.

- 1) Remove the fuel pump assembly. <Ref. to FU(H4SO)-60, REMOVAL, Fuel Pump.>
- 2) Disconnect the connector from the fuel pump bracket.

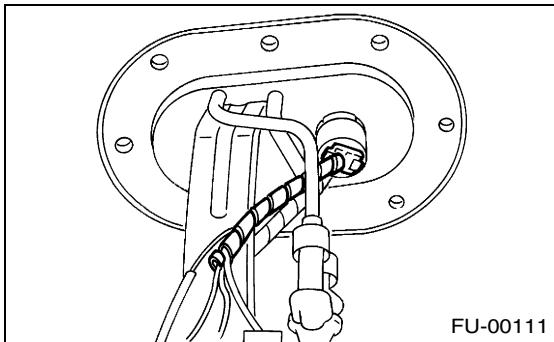

- 3) Remove the bolt which installs the fuel level sensor on the mounting bracket.

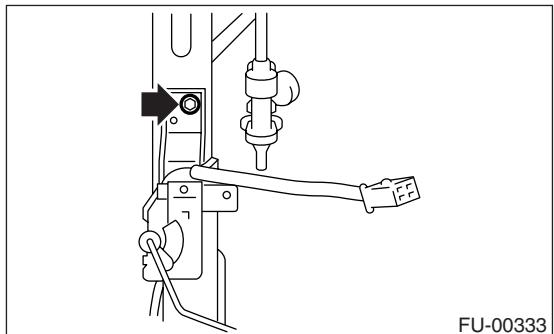

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

4.4 N·m (0.45 kgf·m, 3.3 ft-lb)