


26. Fuel Cut Valve

A: REMOVAL


WARNING:

- Place “NO FIRE” signs near the working area.
- Be careful not to spill fuel on the floor.

- 1) Remove the fuel tank. <Ref. to FU(H4SO)-52, REMOVAL, Fuel Tank.>
- 2) Remove the protect cover.

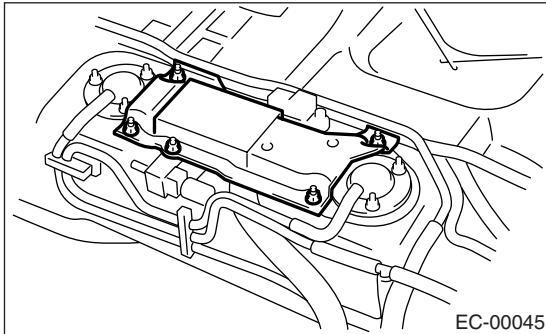

- 3) Move the clip and disconnect the evaporation hose from the fuel cut valve.

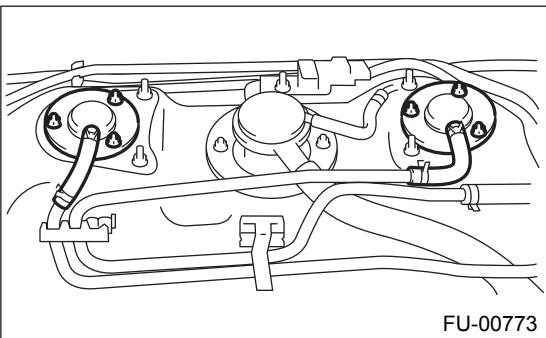

- 4) Remove the bolts which install the fuel cut valve.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

4.4 N·m (0.45 kgf·m, 3.3 ft-lb)

