


## 27. Fuel Damper Valve

### A: REMOVAL

- 1) Release the fuel pressure. <Ref. to FU(H4SO)-51, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
- 2) Remove the fuel damper valve from the fuel return line.

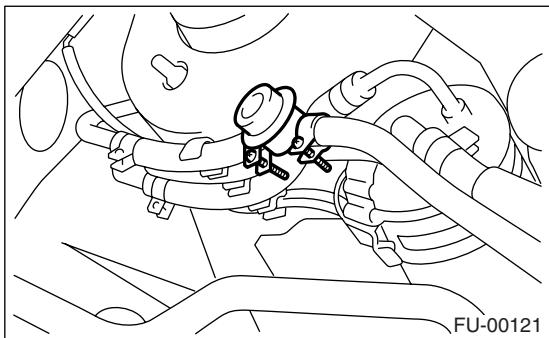

### B: INSTALLATION

Install in the reverse order of removal.

***Tightening torque:***

**1.25 N·m (0.13 kgf·m, 0.94 ft-lb)**