



4. Engine Coolant Temperature Sensor

A: REMOVAL

- 1) Disconnect the ground cable from battery.

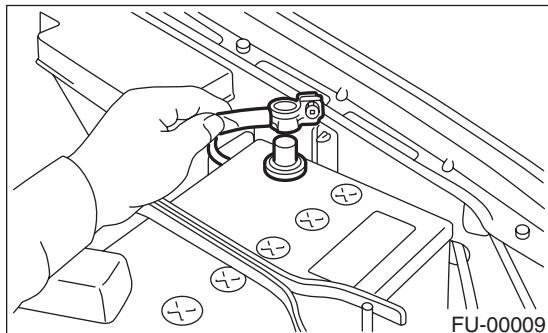

- 2) Remove the air intake duct and air cleaner assembly. <Ref. to IN(H4SO)-7, REMOVAL, Air Intake Duct.> , <Ref. to IN(H4SO)-6, REMOVAL, Air Cleaner Case.>
- 3) Disconnect the connector from engine coolant temperature sensor.

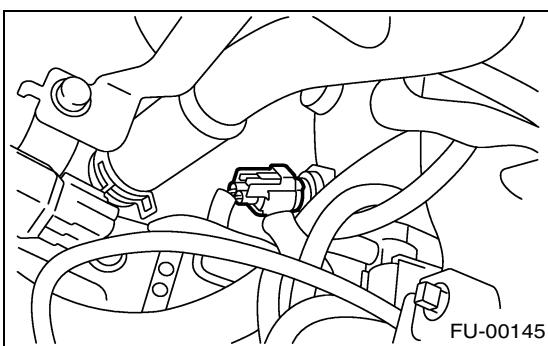

- 4) Remove the engine coolant temperature sensor.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

18 N·m (1.8 kgf·m, 13.0 ft-lb)

